

Panasonic®


Operating Instructions

Digital Cordless Phone

Model No. **KX-TG5511HG**

Digital Cordless Answering System

Model No. **KX-TG5521HG**

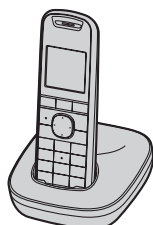

SMS

Model shown is KX-TG5511.

Before initial use, see "Getting Started" on 8. oldal.

Thank you for purchasing a Panasonic product.

Please read these operating instructions before using the unit and save them for future reference.

This unit is compatible with Caller ID and SMS. You must subscribe to the appropriate service offered by your service provider/telephone company.

Introduction

Expanding your phone system

You can expand your phone system by registering optional handsets (6 max.) to a single base unit.

- Optional handsets may be a different colour from that of the supplied handsets.

Handset (optional): KX-TGA551FX



General information

- This equipment is designed for use on the Hungary analogue telephone network.
- In the event of problems, you should contact your equipment supplier in the first instance.

Declaration of Conformity:

- Panasonic System Networks Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

<http://www.doc.panasonic.de>

Contact to Authorised Representative:

Panasonic Testing Centre

Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, Germany

Important Information

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Use only the power source marked on the product.
- Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre.
- Unplug from power outlets and never touch the inside of the product if its casing has been broken open.
- Never touch the plug with wet hands. Danger of electric shock exists.

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects.

Operating safeguards

- Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.
- Do not disassemble the product.
- Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to

become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use.

Medical

- Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in the frequency range of 1.88 GHz to 1.90 GHz, and the RF transmission power is 250 mW (max.).)
- Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

CAUTION

Installation and location

- Never install telephone wiring during an electrical storm.
- Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- This product is unable to make calls when:
 - the handset batteries need recharging or have failed.
 - there is a power failure.
 - the key lock feature is turned on.

Battery

- We recommend using the batteries noted on 4. oldal. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
- Do not mix old and new batteries.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries

Important Information

and/or the conductive material to overheat and cause burns.

- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible base unit (or charger) to charge the batteries. Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the batteries to swell or explode.

Important safety instructions

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

For best performance

Base unit location/avoiding noise

The base unit and other compatible Panasonic units use radio waves to communicate with each other.

- For maximum coverage and noise-free communications, place your base unit:
 - at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
 - away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones.
 - facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations. (Avoid putting the base unit on a bay window or near a window.)

- Coverage and voice quality depends on the local environmental conditions.
- If the reception for a base unit location is not satisfactory, move the base unit to another location for better reception.

Environment

- Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.
- The product should be kept free from excessive smoke, dust, high temperature, and vibration.
- The product should not be exposed to direct sunlight.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long period of time, unplug the product from the power outlet.
- The product should be kept away from heat sources such as radiators, cookers, etc. It should not be placed in rooms where the temperature is less than 0 °C or greater than 40 °C. Damp basements should also be avoided.
- The maximum calling distance may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc.
- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.

Routine care

- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzine, thinner, or any abrasive powder.


Other information

Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

Important Information

Information for Users on Collection and Disposal of Old Equipment and used Batteries

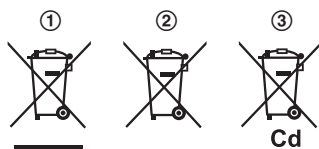

These symbols (①, ②, ③) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

These symbols (①, ②, ③) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol

This symbol (②) might be used in combination with a chemical symbol (③). In this case it complies with the requirement set by the Directive for the chemical involved.

Specifications

- **Standard:**
DECT (Digital Enhanced Cordless Telecommunications),
GAP (Generic Access Profile)
- **Frequency range:**
1.88 GHz to 1.90 GHz
- **RF transmission power:**
Approx. 10 mW (average power per channel)
- **Power source:**
220–240 V AC, 50/60 Hz
- **Power consumption:**
Base unit^{*1}:
Standby: Approx. 0.45 W
Maximum: Approx. 3.8 W
Base unit^{*2}:
Standby: Approx. 0.5 W
Maximum: Approx. 3.8 W
- **Operating conditions:**
0 °C – 40 °C, 20 % – 80 % relative air humidity (dry)

*1 KX-TG5511

*2 KX-TG5521

Megjegyzés:

- Design and specifications are subject to change without notice.
- The illustrations in these instructions may vary slightly from the actual product.

Getting Started


Setting up

Connections


- Use only the supplied Panasonic AC adaptor PQLV219CE.

■ Base unit


Press plug firmly.

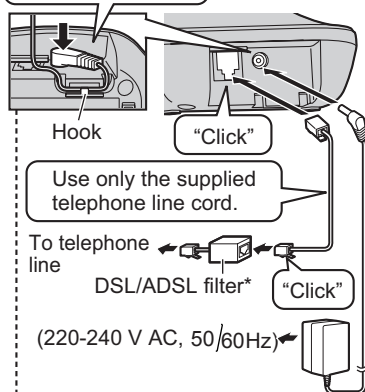

Correct

 


Wrong

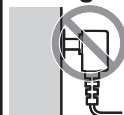 


*DSL/ADSL filter (not supplied) is required if you have DSL/ADSL service.

Battery installation

- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Confirm correct polarities (\oplus , \ominus).

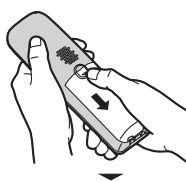

Rechargeable Ni-MH ONLY

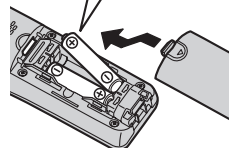

- When the language selection is displayed, see 12. oldal.

Battery charge

Charge for about 7 hours.

- When the batteries are fully charged, the charge indicator goes off and "Töltés kész" is displayed.

Confirm "Feltöltés alatt" is displayed.

Charge indicator



Getting Started**Note when setting up****Note for connections**

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

During a power failure

The unit will not work during a power failure. We recommend connecting a corded-type telephone (without AC adaptor) to the same telephone line or to the same telephone line jack, if you have such a telephone jack in your house.



Note for battery installation



- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on 4, 5. oldal.
- Wipe the battery ends (+, -) with a dry cloth.
- Avoid touching the battery ends (+, -) or the unit contacts.

Note for battery charge

- It is normal for the handset to feel warm during charging.
- Clean the charge contacts of the handset, base unit, and charger with a soft and dry cloth once a month. Clean more often if the unit is exposed to grease, dust, or high humidity.

Battery level

Icon	Battery level
	High
	Medium

Icon	Battery level
	Low
	Needs charging.

Panasonic Ni-MH battery performance (supplied batteries)

Operation	Operating time
In continuous use	18 hours max.
Not in use (standby)	170 hours max.


Megjegyzés:

- It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use).
- Actual battery performance depends on usage and ambient environment.
- Even after the handset is fully charged, the handset can be left on the base unit or charger without any ill effect on the batteries.
- The battery level may not be displayed correctly after you replace the batteries. In this case, place the handset on the base unit or charger and let it charge for at least 7 hours.

Getting Started

Controls

Handset

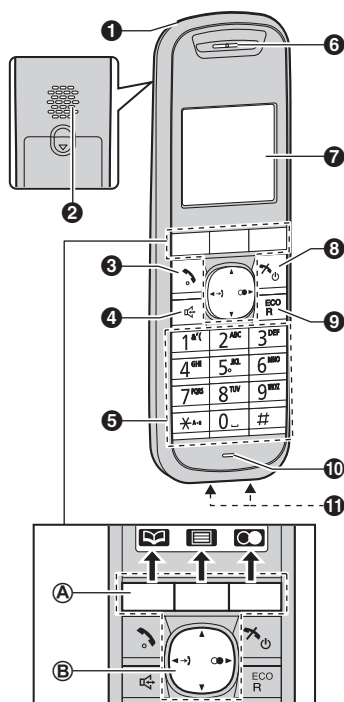

- ① Charge indicator
Ringer indicator
- ② Speaker
- ③ [TALK] (Talk)
- ④ [SPEAKERPHONE] (Speakerphone)
- ⑤ Dial keypad
- ⑥ Receiver
- ⑦ Display
- ⑧ [OFF/POWER] (Off/Power)
- ⑨ [ECO/R]
ECO: Eco mode shortcut key
R: Recall/Flash
- ⑩ Microphone

⑪ Charge contacts

■ Control type

Ⓐ Soft keys


The handset features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display.

Ⓑ Navigator key

- [▲], [▼], [◀], or [▶]: Scroll through various lists and items.
- [▲] or [▼]: Adjust the receiver or speaker volume while talking.
- [◀] (→): Caller list): View the call list.
- [▶] (◀): Redial): View the redial list.

Base unit


■ KX-TG5511

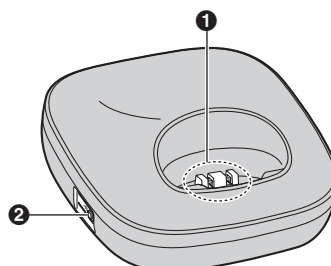

- ① Charge contacts
- ② [LOCATOR] (Locator)

Getting Started

■ KX-TG5521

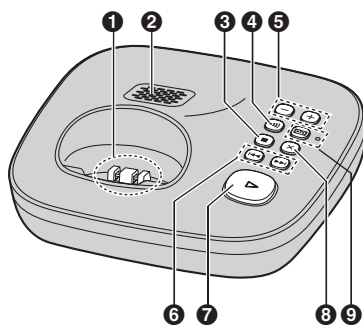

- ❶ Charge contacts
- ❷ Speaker
- ❸ [■] (Stop)
- ❹ [⏏] (Locator)
- ❺ [−]/[+] (Volume down/up)
- ❻ [⏮]/[⏭] (Repeat/Skip)
- ❼ [▶] (Play)
Message indicator
- ❽ [X] (Erase)
- ❾ [☎] (Answer on)
Answer on indicator

Turning the power on/off

Power on

Press [⏻] for about 1 second.

Power off

Press [⏻] for about 2 seconds.

Making/Answering Calls

Making calls

- 1 Lift the handset and dial the phone number.
 - To correct a digit, press **C**.
- 2 Press **[↶]** or **[↷]**.
- 3 When you finish talking, press **[⏏]** or place the handset on the base unit or charger.

Using the speakerphone

- 1 Dial the phone number and press **[☎]**.
 - Speak alternately with the other party.
- 2 When you finish talking, press **[⏏]**.

Megjegyzés:

- For best performance, use the speakerphone in a quiet environment.
- To switch back to the receiver, press **[↶]**.

Adjusting the receiver or speaker volume

Press **[▲]** or **[▼]** repeatedly while talking.

Making a call using the redial list

The last 10 phone numbers dialed are stored in the redial list (each 24 digits max.).

- 1 **[☎]** or **[▶]** (**[☎]**)
- 2 **[▼]/[▲]**: Select the desired phone number.
- 3 **[↶]**

Answering calls

When a call is being received, the ringer indicator flashes rapidly.

- 1 Lift the handset and press **[↶]** or **[☎]** when the unit rings.
 - You can also answer the call by pressing any dial key from **[0]** to **[9]**, **[*]**, or **[#]**. (**Any key answer feature**)
- 2 When you finish talking, press **[⏏]** or place the handset on the base unit or charger.

Auto talk

You can answer calls simply by lifting the handset off the base unit or charger. You do not need to press **[↶]**. To turn this feature on, see 22. oldal.

Adjusting the handset ringer volume

Press **[▲]** or **[▼]** repeatedly to select the desired volume while the handset is ringing for an incoming call.

Megjegyzés:

- You can also program the handset ringer volume beforehand (22. oldal).

Temporary handset ringer off



While the handset is ringing for a call, you can turn the ringer off temporarily by pressing **[🔇]**.

Phonebook

Handset phonebook


The phonebook allows you to make calls without having to dial manually. You can add 100 names and phone numbers.

Adding entries


- 1  → 
- 2 Enter the party's name (16 characters max.). → **OK**
 - You can change the character entry mode by pressing **1/A/P** (41. oldal).
- 3 Enter the party's phone number (24 digits max.). → **OK** 2 times
 - To add other entries, repeat from step 2.
- 4 **[*0]**

Finding and calling a phonebook entry

Scrolling through all entries

- 1 
- 2 **[v]/[^]**: Select the desired entry.
 - You can scroll through the phonebook entry by pressing and holding **[v]** or **[^]**.
- 3 **[^]**

Searching by first character

- 1 
 - Change the character entry mode if necessary:
 - [P]** → **[v]/[^]**: Select the character entry mode. → **OK**
- 2 Press the dial key (**[0]** to **[9]**, or **[#]**) which contains the character you are searching for (41. oldal).
 - Press the same dial key repeatedly to display the first entry corresponding to each character located on that dial key.
 - If there is no entry corresponding to the character you selected, the next entry is displayed.

- 3 **[v]/[^]**: Scroll through the phonebook if necessary.
- 4 **[^]**

Programming

Registering a unit

Operating additional units


Additional handsets

Up to 6 handsets can be registered to the base unit.


Fontos:

- The additional handset model recommended for use with this unit is noted on 4. oldal. If another handset model is used, certain operations (handset settings, base unit settings, etc.) may not be available.

Registering a handset to the base unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit (for example,  is displayed even when the handset is near the base unit), re-register the handset.

1 Handset:

 → **[#][1][3][0]**

2 Base unit:

Proceed with the operation for your model.

■ KX-TG5511

Press and hold **[*]** for about 5 seconds. (No registration tone)

■ KX-TG5521


Press and hold **[*]** for about 5 seconds, until the registration tone sounds.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.
- The next step must be completed within 90 seconds.

3 Handset:

Wait until “**Bázis PIN**” is displayed.

→ Enter the base unit PIN (default: “0000”). → **OK**

- If you forget your PIN, contact an authorised service centre.
- When the handset has been registered successfully,  is displayed.

Megjegyzés:

- While registering, “**Bázisállomás regisztráció**” is displayed on all registered handsets.
- When you purchase an additional handset, refer to the additional handset's installation manual for registration.

Deregistering a handset

A handset can cancel its own registration (or the registration of another handset) that is stored to the base unit. This allows the handset to end its wireless connection with the system.

1 → **[#][1][3][1]**

- All handsets registered to the base unit are displayed.

2 **[v]/[▲]**: Select the handset you want to cancel. → **OK**

3 **[v]/[▲]**: “**IGEN**” → **OK**

- A confirmation tone sounds.
- The handset does not beep when cancelling its own registration.

4 **[*][0]**

Caller ID Service

Using Caller ID service

Fontos:

- This unit is Caller ID compatible. To use Caller ID features, you must subscribe to a Caller ID service. Contact your service provider/telephone company for details.

Caller ID features

When an outside call is being received, the caller's phone number is displayed.

Caller information for the last 50 callers is logged in the caller list from the most recent call to the oldest.

- If the unit cannot receive caller information, the following is displayed:
 - “**Nincs szám**”: The caller dials from an area which does not provide a Caller ID service.
 - “**Privát hívó**”: The caller requests not to send caller information.
- If the unit is connected to a PBX system, caller information may not be properly received. Contact your PBX supplier.

Using SMS

SMS allows you to send and receive text messages between other fixed-line and mobile phones that support compatible SMS networks and features.

Fontos:

- To use SMS features, you must:
 - subscribe to a Caller ID and/or an appropriate service such as SMS.
 - confirm that SMS is turned on.
 - confirm that the correct message centre numbers are stored.


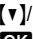 
Contact your service provider/telephone company for details and availability.

Megjegyzés:

- A total of 47 messages (at 160 characters/message) can be saved. Total number may be more than 47 if length of messages is less than 160 characters/message.
- If the unit is connected to a PBX system, you may not be able to use SMS features.



Turning SMS on/off

The default setting is "KI".

-  → [#][3][5][7]
- /[▲]: Select the desired setting. → **OK** → [↵]

Storing SMS message centre numbers

SMS message centre numbers must be stored in order to send and receive SMS messages. Contact your service provider/telephone company for more information.

- To store "1. üzenet központ":
 → [#][3][5][1]
 To store "2. üzenet központ":
 → [#][3][5][2]

SMS (Short Message Service)


 
- Edit the number as necessary. → **OK** → [↵]


 
Megjegyzés:



- For PBX users:
 - You need to add the PBX line access number and a dialling pause to the beginning of the Message Centre 1 number.
 - If you only use the Message Centre 1 number for SMS, store the Message Centre 1 number as is (without adding a line access number or dialling pause) to Message Centre 2.

   
 
Sending a message


 
Writing and sending a new message

-  → [#][3][5][0]
- /[▲]: "Új üzenet" → **OK**
- Enter a message. → **OK**
 - You can change the character entry mode by pressing **I/A?** (41. oldal).
- Enter the destination phone number (20 digits max.). → **OK**

To use the redial list:
 (●) → /[▲]: Select the phone number. → **OK** 2 times

To use the caller list:
 (➔) → /[▲]: Select the party. → **OK** 2 times

 - If ► is displayed, not all of the information is shown. To see the remaining information, press . To return to the previous screen, press .

To use the phonebook:
 → /[▲]: Select the phonebook entry. → **OK** 2 times
- To save the message, select "IGEN". → **OK**
- To send the message, press **OK**.
 - To cancel sending, press [↵].

SMS (Short Message Service)

Megjegyzés:

- This unit supports SMS messages of up to 612 characters, however, the maximum number of characters you can send or receive may be limited by your SMS service provider/telephone company. Contact your SMS service provider/telephone company for details.
- If your message contains over 160 characters, the message is a long message and “*Hosszú üz.*” is displayed. Your service provider/telephone company may treat long messages differently from other messages. Contact your service provider/telephone company for details.
- If your phone is connected to a PBX, store the PBX line access number (33. oldal).

Editing/sending a saved message

- 1 → [#][3][5][0]
- 2 [▼]/[▲]: “Küldött lista” → **OK**
- 3 To read a saved message, press [▼] or [▲] to select the message. → **OK**
- 4 **To edit the message:**
 → [▼]/[▲]: “Üzenet szerkesztése” → **OK** → Continue from step 3, „Writing and sending a new message”, 31. oldal.
To send the message:
 → [▼]/[▲]: “Küldés” → **OK**
 → Press and hold **C** to erase all numbers. → Continue from step 4, „Writing and sending a new message”, 31. oldal.

Erasing saved messages

- 1 → [#][3][5][0]
- 2 [▼]/[▲]: “Küldött lista” → **OK**
- 3 [▼]/[▲]: Select a message. → **OK**
- 4 → [▼]/[▲]: “Törlés” → **OK**
 - To erase all messages, select “Mindent töröl”. → **OK**
- 5 [▼]/[▲]: “IGEN” → **OK** →

Receiving a message

When an SMS message is received:

- “Fogadás SMS-üzenet” is displayed.
- a tone is heard (if the handset ringer is turned on).
- is displayed with the total number of new (unread) SMS messages.

Reading a received message

- 1 → [#][3][5][0]
- 2 [▼]/[▲]: “Fogadott lista” → **OK**
- 3 [▼]/[▲]: Select a message.
 - Messages which have already been read are indicated by a “✓”, even if they were read using another handset.
 - To erase a message, press **X**. → [▼]/[▲]: “IGEN” → **OK**
- 4 Press **OK** to read the message content.

Megjegyzés:

- To call the message sender, press [↶].

Replying to a message

- 1 While reading a received message, press .
- 2 [▼]/[▲]: “Válasz” → **OK**
- 3 Enter a message (41. oldal). → **OK**
- 4 Edit the destination phone number if necessary. → **OK**
- 5 Continue from step 5, „Writing and sending a new message”, 31. oldal.

Editing/forwarding a message

- 1 While reading a received message, press .
- 2 [▼]/[▲]: “Üzenet szerkesztése” → **OK**
- 3 Continue from step 3, „Writing and sending a new message”, 31. oldal.

Erasing received messages

- 1 While reading a received message, press .

SMS (Short Message Service)

- 2 [v]/[▲]: "Törölés" → **OK**
 - To erase all messages, select "Mindent töröl". → **OK**
- 3 [v]/[▲]: "IGEN" → **OK** → [↶⏏]

Storing the sender's number in the phonebook

- 1 While reading a received message, press [≡].
- 2 [v]/[▲]: "Tel.könyvbe ír" → **OK**
- 3 To store the name, continue from step 2, „Adding entries”, 17. oldal.

Editing the sender's number before calling back

- 1 While reading a received message, press [≡].
- 2 [v]/[▲]: "Szerkeszt és Hív" → **OK**
- 3 Edit the number. → [↶]

Other settings

Storing the PBX line access number (for PBX users only)

Store your PBX line access number (4 digits max.) so that SMS messages are sent properly. When sending SMS messages to entries in the phonebook or redial list, the PBX line access number is deleted. The default setting is "KI".

- 1 [≡] → [#][3][5][6]
- 2 [v]/[▲]: "BE" → **OK**
- 3 Enter your PBX line access code and a dialling pause, if necessary. → **OK** → [↶⏏]

Answering System

Answering system

Available for:
KX-TG5521

The answering system can answer and record calls for you when you are unavailable to answer the phone.

You can also set the unit to play a greeting message but not to record caller messages by selecting "Csak üdv." as the recording time setting (38. oldal).


Fontos:

- Only 1 person can access the answering system (listen to messages, record a greeting message, etc.) at a time.
- When callers leave messages, the unit records the day and time of each message. Make sure the date and time have been set correctly (12. oldal).

Turning the answering system on/off


The answering system is preset to on.


Base unit


Press **[]** to turn on/off the answering system.

- When the answering system is turned on, the answer on indicator lights up.


Handset

1 To turn on:
[] → **[#][3][2][7]**

To turn off:
[] → **[#][3][2][8]**

2 []

Megjegyzés:

- When the answering system is turned on, **[]** is displayed next to the battery icon.

Answering System




Greeting message

When the unit answers a call, a greeting message is played to callers.

You can use either:

- your own greeting message
- pre-recorded greeting message

Recording your greeting message

- 1  → [#][3][0][2]
- 2 [v]/[Δ]: "IGEN" → OK
- 3 After a beep sounds, hold the handset about 20 cm away and speak clearly into the microphone (2 minutes and 30 seconds max.).
- 4 Press  to stop recording.
- 5 

Listening to messages using the base unit

When new messages have been recorded, [▷] on the base unit flashes. Press [▷].

- If new messages have been recorded, the base unit plays back new messages.
- If there are no new messages, the base unit plays back all messages.

Megjegyzés:

 
 
 
- When the answer on indicator on the base unit flashes rapidly, the message memory is full ("Memory capacity (including your greeting message)", page 31).



Useful Information



Declaration of conformity form





For your future reference

We recommend keeping a record of the following information to assist with any repair under warranty.

 
Serial No.

Date of purchase


(found on the bottom of the base unit)

Name and address of dealer

Attach your purchase receipt here.



CE0470

 

Sales Department:

 
Panasonic South-East Europe Kft.
1117 Budapest, Neumann J. u. 1.

Panasonic System Networks Co., Ltd.
1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

Copyright:

This material is copyrighted by Panasonic System Networks Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic System Networks Co., Ltd.

© Panasonic System Networks Co., Ltd. 2010



PNQX2697ZA

