

# Panasonic


## Operating Instructions

Digital Cordless Phone

Model No. **KX-TG8411HG**

Digital Cordless Answering System

Model No. **KX-TG8421HG**

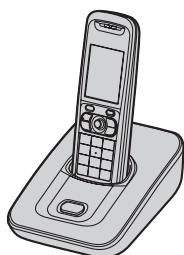

Model shown is KX-TG8411.

**SMS**

This unit is compatible with Caller ID and SMS. You must subscribe to the appropriate service offered by your service provider/telephone company.

**Charge the batteries for about 7 hours before initial use.**

Please read these operating instructions before using the unit and save them for future reference.

## Introduction

### Fontos:

- The suffix (HG) in the following model numbers will be omitted in these instructions:  
KX-TG8411HG/KX-TG8421HG

### General information

- This equipment is designed for use on the Hungary analogue telephone network.
- In the event of problems, you should contact your equipment supplier in the first instance.

### Declaration of Conformity:

- Panasonic Communications Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

<http://www.doc.panasonic.de>

### Contact to Authorised Representative:

Panasonic Testing Centre  
Panasonic Marketing Europe GmbH  
Winsbergring 15, 22525 Hamburg, Germany

## Expanding your phone system

You can expand your phone system by registering optional handsets (max. 6) to a single base unit.

### Handset (optional): KX-TGA840FX



## Introduction

### For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

### WARNING

#### Power connection

- Use only the power source marked on the product.
- Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre.
- Never touch the plug with wet hands. Danger of electric shock exists.

#### Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.

### Operating safeguards

- Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.
- Do not disassemble the product.
- Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use.
- The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss.

### Medical

- Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in the frequency range of 1.88 GHz to 1.90 GHz, and the RF transmission power is 250 mW (max.).)
- Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### CAUTION

#### Installation and relocation

- Never install telephone wiring during an electrical storm.
- Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

## Introduction

- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- This product is unable to make calls when:
  - the handset batteries need recharging or have failed.
  - there is a power failure.
  - the key lock feature is turned on.

### Battery

- We recommend using the batteries noted on 5. oldal. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
- Do not mix old and new batteries.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible base unit (or charger) to charge the batteries. Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the batteries to swell or explode.

## Important safety instructions

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water for example, near a bathtub, washbowl,

- kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

### SAVE THESE INSTRUCTIONS

## For best performance

### Base unit location/avoiding noise

The base unit and other compatible Panasonic units use radio waves to communicate with each other.

- For maximum coverage and noise-free communications, place your base unit:
  - at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
  - away from electronic appliances such as TVs, radios, personal computers, wireless devices or other phones.
  - avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations (avoid putting the base unit on a bay window or near a window).
- Coverage and voice quality depends on the local environmental conditions.
- If the reception for a base unit location is not satisfactory, move the base unit to another location for better reception.

### Environment

- Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.

## Introduction

- The product should be kept free from excessive smoke, dust, high temperature, and vibration.
- The product should not be exposed to direct sunlight.
- Do not place heavy objects on the power cord or top of the product.
- When you leave the product unused for a long period of time, unplug the product from the power outlet.
- The product should be kept away from heat sources such as radiators, cookers, etc. It should not be placed in rooms where the temperature is less than 0 °C or greater than 40 °C. Damp basements should also be avoided.
- The maximum calling distance may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc.
- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.


### Routine care

- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzine, thinner, or any abrasive powder.

### Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase the information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

### Information for Users on Collection and Disposal of Old Equipment and used Batteries

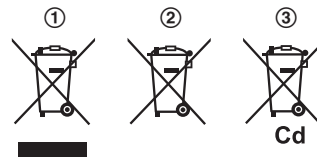

These symbols (①, ②, ③) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC. By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

### Information on Disposal in other Countries outside the European Union

These symbols (①, ②, ③) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

### Note for the battery symbol

This symbol (②) might be used in combination with a chemical symbol (③). In this case it complies with the requirement set by the Directive for the chemical involved.


## Getting Started

### Setting up

#### Connections

- Use only the supplied Panasonic AC adaptor PQLV219CE.


#### ■ Base unit

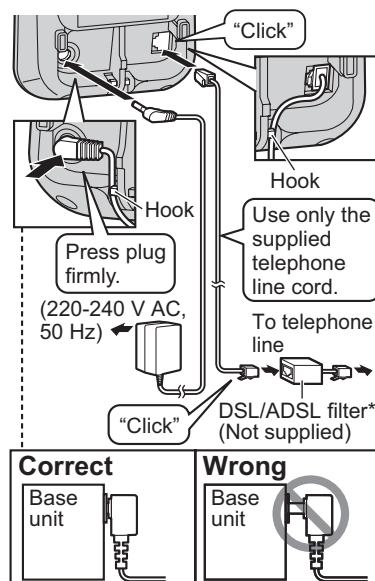

\*For DSL/ADSL service users

### Battery installation

- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Confirm correct polarities ( $\oplus$ ,  $\ominus$ ).

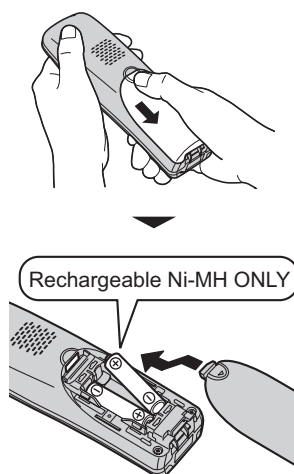

- When the language selection is displayed, see page 8.

### Battery charge

Charge for about 7 hours.

- When the batteries are fully charged, the charge indicator goes off.

Confirm "Charging" is displayed.



## Getting Started

### Note when setting up

#### Note for connections

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

#### During a power failure

The unit will not work during a power failure. We recommend connecting a corded-type telephone (without AC adaptor) to the same telephone line or to the same telephone line jack, if you have such a telephone jack in your house.

#### Note for battery installation


- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on page 4, 10.
- Wipe the battery ends (⊕, ⊖) with a dry cloth.
- Avoid touching the battery ends (⊕, ⊖) or the unit contacts.

#### Note for battery charge


- It is normal for the handset to feel warm during charging.
- Clean the charge contacts of the handset, base unit, and charger with a soft and dry cloth once a month. Clean more often if the unit is exposed to grease, dust, or high humidity.

### Turning the power on/off

#### Power on

Press **[]** for about 1 second.

#### Power off

Press **[]** for about 2 seconds.

### Specifications

■ **Standard:**  
DECT (Digital Enhanced Cordless Telecommunications),  
GAP (Generic Access Profile)

■ **Frequency range:**  
1.88 GHz to 1.90 GHz

■ **RF transmission power:**  
Approx. 10 mW (average power per channel)

■ **Power source:**  
220–240 V AC, 50 Hz

■ **Power consumption:**  
**Base unit \*1:**  
Standby: Approx. 0.7 W  
Maximum: Approx. 4.0 W

**Base unit\*2:**  
Standby: Approx. 0.9 W  
Maximum: Approx. 4.2 W

■ **Operating conditions:**  
0 °C–40 °C, 20 %–80 % relative air humidity (dry)

#### Note:

- Design and specifications are subject to change without notice.
- The illustrations in these instructions may vary slightly from the actual product.

\*1 KX-TG8411


\*2 KX-TG8421

## Preparation

### Controls

#### Base unit


■KX-TG8411

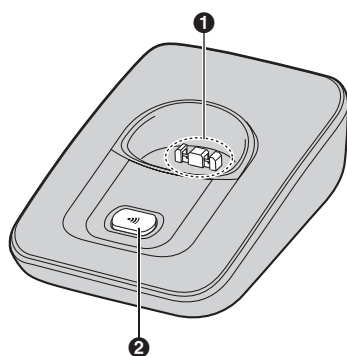

- ① Charge contacts
- ② [••] (Locator)

#### Base unit

■KX-TG8421

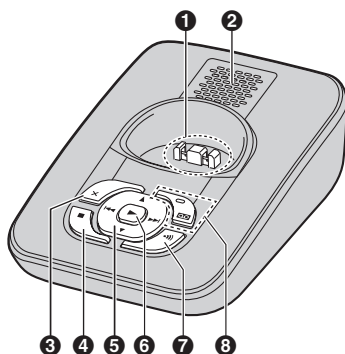


- ① Charge contacts
- ② Speaker
- ③ [X] (Erase)
- ④ [■] (Stop)

- ⑤ [▲] (Volume up)
- [▼] (Volume down)
- [◀◀] (Repeat)
- [▶▶] (Skip)
- ⑥ [▶] (Play)
- Message indicator
- ⑦ [••] (Locator)
- ⑧ [☎] (Answer on)
- Answer on indicator



## Preparation

### Handset

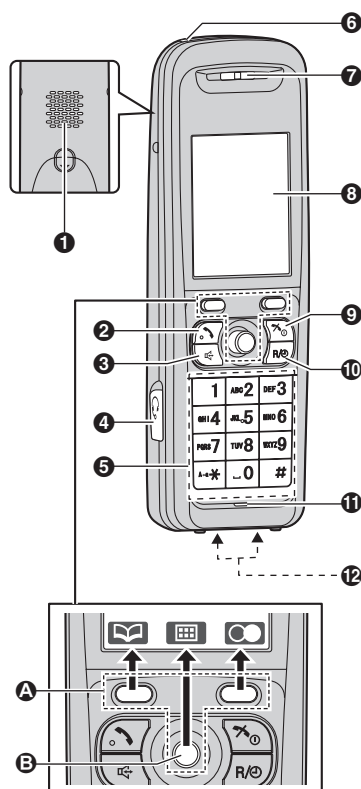

#### 1 Speaker

#### 2 [↶] (Talk)

#### 3 [☎] (Speakerphone)

#### 4 Headset jack

#### 5 Dial keypad

#### 6 Charge indicator Ringer indicator

#### 7 Receiver

#### 8 Display

#### 9 [✖] (Off/Power)

#### 10 [R/⏏] R: Recall/Flash ⏏: Alarm shortcut key

#### 11 Microphone

#### 12 Charge contacts

#### ■ Control type

##### A Soft keys

The handset features 2 soft keys and a joystick. By pressing a soft key, or by pressing the centre of the joystick, you can select the feature shown directly above it on the display.

##### B Joystick

The handset joystick can be used to navigate through menus and to select items shown on the display by pushing it up [▲], down [▼], left [◀], or right [▶].

- When there are multiple items which cannot be displayed on the screen at a time, you can search the desired item quickly by pushing the joystick right or left, instead of scrolling up or down by one line (page 23).

## Making/Answering Calls

### Making calls

- 1 Lift the handset and dial the phone number.
  - To correct a digit, press [C/⌫].
- 2 [↶]
- 3 When you finish talking, press [⏏] or place the handset on the base unit or charger.

#### Using the speakerphone

- 1 Dial the phone number, and press [⏏].
  - Speak alternately with the other party.
- 2 When you finish talking, press [⏏].

#### Megjegyzés:

- For best performance, use the speakerphone in a quiet environment.
- To switch back to the receiver, press [↶].

#### Adjusting the receiver or speaker volume

Push the joystick up or down repeatedly while talking.

#### Making a call using the redial list

The last 10 phone numbers dialed are stored in the redial list (each 24 digits max.).

- 1 [⏏] (right soft key)
- 2 [↵]/[⬆]: Select the desired phone number.
- 3 [↶] / [⏏]
  - If [⏏] is pressed and the other party's line is engaged, the unit automatically redials multiple times. While the handset is waiting to redial, the ringer indicator flashes. To cancel, press [⏏].

### Answering calls

When a call is being received, the ringer indicator on the handset flashes.

- 1 Lift the handset and press [↶] or [⏏] when the unit rings.
  - You can also answer the call by pressing any dial key from [0] to [9], [∗], or [#]. (Any key answer feature)
- 2 When you finish talking, press [⏏] or place the handset on the base unit or charger.

#### Auto talk

You can answer calls simply by lifting the handset off the base unit or charger. You do not need to press [↶]. To turn this feature on, see 25. oldal.

#### Adjusting the handset ringer volume

Push the joystick up or down repeatedly to select the desired volume while the handset is ringing for an incoming call.

#### Megjegyzés:

- You can also program the handset ringer volume beforehand (24. oldal).

## Phonebook

### Handset phonebook

The phonebook allows you to make calls without having to dial manually. You can add 200 names and phone numbers, assign each phonebook entry to the desired category.

#### Adding entries

- 1 (left soft key) →
- 2 **[v]/[▲]**: "Új bejegyzés" → **OK**
- 3 Enter the party's name (16 characters max.; 47. oldal). → **OK**
- 4 Enter the party's phone number (24 digits max.). → **OK**
- 5 **[v]/[▲]**: Select the desired category. → **OK** 2 times
  - To add other entries, repeat from step 3.
- 6 **[✕]**

#### Categories

Categories can help you find entries in the phonebook quickly and easily. When adding an entry to the phonebook, you can assign it to the desired category. You can change the names of categories assigned for phonebook entries ("Friends", "Family", etc.) and then search for phonebook entries by category. Additional category features are available for Caller ID subscribers (33. oldal).

#### Changing category names

- 1 (left soft key) →
- 2 **[v]/[▲]**: "Kategória" → **OK**
- 3 **[v]/[▲]**: Select the desired category. → **OK**
- 4 **[v]/[▲]**: "Kategória név" → **OK**
- 5 Edit the name (10 characters max.; 47. oldal). → **OK** → **[✕]**

### Finding and calling a phonebook entry

#### Scrolling through all entries

- 1 (left soft key)

- 2 **[v]/[▲]**: Select the desired entry.
  - You can scroll through the phonebook entry by pushing and holding the joystick down or up.

- 3 **[↶]**

#### Searching by first character (using a dial key)

- 1 (left soft key)
- 2 Press the dial key (**[0]** to **[9]**) which contains the character you are searching for (47. oldal).
  - Press the same dial key repeatedly to display the first entry corresponding to each character located on that dial key.
  - If there is no entry corresponding to the character you selected, the next entry is displayed.
  - To change the character entry mode: **[0]** → **[v]/[▲]**: "ABC keresés" → **OK** → **[v]/[▲]**: Select the character entry mode. → **OK**
- 3 **[v]/[▲]**: Scroll through the phonebook if necessary.
- 4 **[↶]**

#### Searching by category

- 1 (left soft key) →
- 2 **[v]/[▲]**: "Kateg. keresés" → **OK**
- 3 **[v]/[▲]**: Select the desired category. → **OK**
  - If you select "Minden", the unit ends the category search.
- 4 **[v]/[▲]**: Scroll through the phonebook if necessary.
- 5 **[↶]**

## Programming

### Registering a unit

#### Operating additional units

##### Additional handsets

Up to 6 handsets can be registered to a single base unit.

##### Fontos:

- The additional handset model recommended for use with this unit is noted on 5. oldal. If another handset model is used, certain operations (handset settings, base unit settings, etc.) may not be available.


##### Additional base units

Handsets can be registered to up to 4 base units, allowing you to add additional base units and extend the area in which your handset(s) can be used. If a handset moves out of range of its base unit when "Automata" is selected on base unit (31. oldal), it looks for another base unit to make or receive calls. A base unit and the handsets it communicates with is called a "radio cell".

##### Megjegyzés:

- Calls are disconnected when the handset moves from one radio cell to another.

### Registering a handset to a base unit

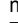The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit (for example,  flashes even when the handset is near the base unit), register the handset.

#### 1 Handset:

 (centre of joystick) →  → **OK**

#### 2 **[▼]/[▲]: "Regisztráció" → **OK** 2 times**

#### 3 **[▼]/[▲]: Select a base unit number. → **OK****

- This number is used by the handset as a reference only.

#### 4 Base unit:

Proceed with the operation for your model.

##### ■ KX-TG8411

Press and hold **[\*]** for about 5 seconds. (No registration tone)


##### ■ KX-TG8421

Press and hold **[\*]** for about 5 seconds, until the registration tone sounds.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.
- The next step should be completed within 90 seconds.

#### 5 Handset:

Wait until "Bázis PIN beír." is displayed. → Enter the base unit PIN (default: "0000"). → **OK**

- If you forget your PIN, contact your nearest Panasonic service centre.
- When the handset has been registered successfully,  stops flashing.



##### Megjegyzés:

- When you purchase an additional handset, refer to the additional handset's installation manual for registration.

## Programming



### Selecting a base unit

When "Automata" is selected, the handset automatically uses any available base unit it is registered to. When a specific base unit is selected, the handset makes and receives calls using that base unit only. If the handset is out of range of that base unit, no calls can be made.

- 1  (centre of joystick) →  → **OK**
- 2 **[▼]/[▲]**: "Bázisválasztás" → **OK**
- 3 **[▼]/[▲]**: Select the desired base unit number, or "Automata". → **OK**
  - The handset starts searching for the base unit.


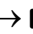
### Deregistering a handset

A handset can cancel its own registration (or the registration of another handset) that is stored in the base unit. This allows the handset to end its wireless connection with the system.

- 1  (centre of joystick) →  → **OK**
- 2 **[3][3][5]**
- 3 **[▼]/[▲]**: "Kijelentkezés" → **OK**
  - The numbers of all handsets registered to the base unit are displayed.
- 4 Select the handset(s) you want to cancel by pressing the desired handset number. → **OK**
  - The selected handset number(s) flashes.
  - To cancel a selected handset number, press the number again. The number stops flashing.
- 5 **[▼]/[▲]**: "IGEN" → **OK**
  - A confirmation tone sounds as each handset number disappears.
  - The handset does not beep when cancelling its own registration.
- 6 **[✕][0]**

### Cancelling a base unit

A handset can cancel a base unit that it is registered to. This allows the base unit to end its wireless connection with the system.

- 1  (centre of joystick) →  → **OK**
- 2 **[▼]/[▲]**: "Regisztráció" → **OK**
- 3 **[3][3][5]**
- 4 **[▼]/[▲]**: "Bázis törlése" → **OK**
- 5 Select the base unit(s) you want to cancel by pressing the desired base unit number. → **OK**
  - The selected base unit number(s) flashes.
  - To cancel a selected base unit number, press the number again. The number stops flashing.
- 6 **[▼]/[▲]**: "IGEN" → **OK** → **[✕][0]**

### Megjegyzés:

- To register a handset to another base unit or to the same base unit again, see 30. oldal.

## Caller ID Service

### Using Caller ID service

#### Fontos:

- This unit is Caller ID compatible. To use Caller ID features, you must subscribe to a Caller ID service. Contact your service provider/telephone company for details.

#### Caller ID features

When an outside call is being received, the caller's phone number is displayed. Caller information for the last 50 callers is logged in the caller list from the most recent call to the oldest.

- If the unit cannot receive caller information, the following is displayed:
  - “**Hatótávon kívül**”: The caller dialled from an area which does not provide a Caller ID service.
  - “**Privát hívó**”: The caller requested not to send caller information.
- If the unit is connected to a PBX system, caller information may not be properly received. Contact your PBX supplier.

## Using SMS

SMS allows you to send and receive text messages between other fixed-line and mobile phones that support compatible SMS networks and features.

### Fontos:

- To use SMS features, you must:
  - subscribe to a Caller ID and/or an appropriate service.
  - confirm that SMS is turned on.
  - confirm that the correct message centre numbers are stored.



Contact your service provider/telephone company for details and availability.

### Megjegyzés:

- A total of 47 messages (at 160 characters/message) in all mailboxes added together can be saved. Total number may be more than 47 if length of messages is less than 160 characters/message.
- If the unit is connected to a PBX system, you may not be able to use SMS features.

## Turning SMS on/off

The default setting is "KI".



- 1  (centre of joystick) →  → **OK**
- 2 **[▼]/[▲]**: "Beállítások" → **OK**
- 3 **[▼]/[▲]**: "SMS BE/KI" → **OK**
- 4 **[▼]/[▲]**: Select the desired setting. → **OK** → **[↶]**

## Storing SMS message centre numbers

SMS message centre numbers must be stored in order to send and receive SMS messages.

Contact your service provider/telephone company for more information.

## SMS (Short Message Service)





- 1  (centre of joystick) →  → **OK**
- 2 **[▼]/[▲]**: "Beállítások" → **OK**
- 3 **[▼]/[▲]**: Select "1. Üzenetközpont" or "2. Üzenetközpont". → **OK**
- 4 Edit the number as necessary. → **OK** 2 times → **[↶]**

### Megjegyzés:

- For PBX users:
  - You need to add the PBX line access number and a dialling pause to the beginning of the Message Centre 1 number.
  - If you only use the Message Centre 1 number for SMS, store the Message Centre 1 number as is (without adding a line access number or dialling pause) to Message Centre 2.

## Sending a message


### Writing and sending a new message

- 1  (centre of joystick) →  → **OK**
- 2 **[▼]/[▲]**: "Új üzenet" → **OK**
  - If "Szöveg marad?" is displayed, you can use the text from the last message you created by pushing the joystick up.
- 3 Enter the message (47. oldal). → **OK**
- 4 Enter the destination phone number (20 digits max.). → **OK**
  - **Using the redial list:**  
Press  repeatedly to select the phone number. → **OK** 2 times
  - **Using the caller list:**  
**[▼]/[▲]**: Select the party. → **OK** 2 times
  - **Using the phonebook:**  
 → **[▼]/[▲]**: Select the phonebook entry. → **OK** 2 times
- 5 To save the message, select "IGEN". → **OK**
- 6 To send the message, press **OK**.


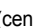

### SMS (Short Message Service)

- To cancel sending, press **[✕]**.


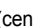

#### Megjegyzés:

- This unit supports SMS messages of up to 612 characters, however, the maximum number of characters you can send or receive may be limited by your SMS service provider/telephone company. Contact your SMS service provider/telephone company for details.
- If your message contains over 160 characters, the message is a long message and  is displayed. Your service provider/telephone company may treat long messages differently from other messages. Contact your service provider/telephone company for details.
- If your phone is connected to a PBX, store the PBX line access number (37. oldal).


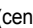
### Sending a saved message


- 1  (centre of joystick) →  → **OK**
- 2 **[▼]/[▲]**: "Küldött lista" → **OK**
- 3 To read a saved message, push the joystick down or up to select the message. → **OK**
- 4 To send the message, press . → **[▼]/[▲]**: "Küldés" → **OK**
- 5 Press and hold **[C/✕]** to erase all numbers.
- 6 Continue from step 4, "Writing and sending a new message", 35. oldal.

### Editing and sending a saved message

- 1  (centre of joystick) →  → **OK**
- 2 **[▼]/[▲]**: "Küldött lista" → **OK**
- 3 **[▼]/[▲]**: Select a message. → **OK**
- 4  → **[▼]/[▲]**: "Üzenet szerk." → **OK**
- 5 Continue from step 3, "Writing and sending a new message", 35. oldal.


### Erasing saved messages

- 1  (centre of joystick) →  → **OK**
- 2 **[▼]/[▲]**: "Küldött lista" → **OK**



- 3 **[▼]/[▲]**: Select a message. → **OK**
- 4  → **[▼]/[▲]**: "Törlés" → **OK**
  - To erase all messages, select "Mindent töröl". → **OK**
- 5 **[▼]/[▲]**: "IGEN" → **OK** → **[✕]**

### Receiving a message

When an SMS message is received:

- "Fogadás SMS-üzenet" is displayed.
- a tone is heard (if the handset ringer is turned on).
-  is displayed with the total number of new (unread) SMS messages.


### Reading a received message

- 1  (centre of joystick) →  → **OK**
- 2 **[▼]/[▲]**: "Fogadott lista" → **OK**
- 3 **[▼]/[▲]**: Select a message.
  - Messages which have already been read are indicated by a "✓", even if they were read using another handset.
  - To erase a message, press **[✕]**. → **[▼]/[▲]**: "IGEN" → **OK**
- 4 Press **OK** to read the message content.


#### Megjegyzés:

- To call the message sender, press **[☎]**.

### Replying to a message

- 1 While reading a received message, press .
- 2 **[▼]/[▲]**: "Válasz" → **OK**
- 3 Enter a message (47. oldal). → **OK**
- 4 Edit the destination phone number and/or press **OK**.
- 5 Continue from step 5, "Writing and sending a new message", 35. oldal.

### Editing/forwarding a message



- 1 While reading a received message, press .
- 2 **[▼]/[▲]**: "Üzenet szerk." → **OK**




**SMS (Short Message Service)**

- 3 Continue from step 3, „Writing and sending a new message”, 35. oldal.



**Erasing received messages**

- 1 While reading a received message, press .
- 2 [v]/[^]: “Törölés” → **OK**
- To erase all messages, select “Mindent töröl”. → **OK**
- 3 [v]/[^]: “IGEN” → **OK** → []

**Storing the sender's number in the phonebook**




- 1 While reading a received message, press .
- 2 [v]/[^]: “Tel.könyvbe ír” → **OK**
- 3 To store the name, continue from step 3, „Adding entries”, 21. oldal.

**Editing the sender's number before calling back**

- 1 While reading a received message, press .
- 2 [v]/[^]: “Szerk. és hív” → **OK**
- 3 Edit the number. → []

**Other settings****Storing the PBX line access number (for PBX users only)**

Store your PBX line access number (4 digits max.) so that SMS messages are sent properly. When sending SMS messages to entries in the phonebook or redial list, the PBX line access number is deleted. The default setting is “KI”.

- 1  (centre of joystick) →  → **OK**
- 2 [v]/[^]: “Beállítások” → **OK**
- 3 [v]/[^]: “Külső vonal sz.” → **OK**
- 4 [v]/[^]: “BE” → **OK**
- 5 Enter your PBX line access code and a dialling pause, if necessary. → **OK** 2 times → []

## Answering System

### Answering system

**Available for:**  
KX-TG8421

The answering system can answer and record calls for you when you are unavailable to answer the phone.

### Turning the answering system on/off

The answering system is preset to on.

#### Using the base unit

Press **[M]** to turn on/off the answering system.

- When the answering system is turned on, the answer on indicator lights up.

### Greeting message

When the unit answers a call, callers hear a greeting message. You can record your own greeting message or use a pre-recorded greeting message.

#### Recording your greeting message

You can record your own greeting message (2 minutes and 30 seconds max.).

- 1 **[M]** (centre of joystick) → **[M]** → **OK**
- 2 **[V]/[A]**: "Üdvözlés felv." → **OK**
- 3 Hold the handset about 20 cm away and speak clearly into the microphone.
- 4 Press **[M]** to stop recording.
- 5 **[X]**

### Listening to messages using the base unit

When new messages have been recorded, **[M]** on the base unit flashes.

Press **[M]**.

- If new messages have been recorded, the base unit plays back new messages.
- If there are no new messages, the base unit plays back all messages.

#### Megjegyzés:

 
 
 
- When the answer on indicator on the base unit flashes rapidly, the message memory is full („Memory capacity”, 38. oldal).



***Useful Information***



**Declaration of conformity form**





**For your future reference**

We recommend keeping a record of the following information to assist with any repair under warranty.

 
 
Serial No.

Date of purchase

(found on the bottom of the base unit)

Name and address of dealer

Attach your purchase receipt here.



CE0682

**Sales Department:**

**Panasonic South-East Europe Kft.**

1117 Budapest, Neumann J. u. 1.

**Panasonic Communications Co., Ltd.**

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

**Copyright:**

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© Panasonic Communications Co., Ltd. 2008

