


Panasonic®

Operating Instructions

**Digital Cordless Phone
with TFT Colour Display**

Model No. **KX-TG8611PD**

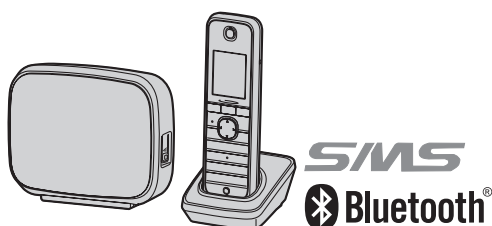

***Before initial use, see “Getting Started”
on 8. oldal.***

Thank you for purchasing a Panasonic product.

Please read these operating instructions before using the unit and save them for future reference.

This unit is compatible with Caller ID and SMS. You must subscribe to the appropriate service offered by your service provider/telephone company. Caller ID service is realized in FSK system (for Poland).

To use this unit in your country, first change the unit's region setting to match your country (29. oldal). Change the unit's display language as needed (13. oldal).

Tartalom

Introduction

Accessory information	3
General information	4

Important Information

For your safety	5
Important safety instructions	6
For best performance	6
Other information	6
Specifications	7

Getting Started

Setting up	8
Note when setting up	9
Controls	10
Display	11
Screen saver mode	12
Turning the power on/off	12
Initial settings	12
One touch eco mode	13
Display mode	13
Belt clip	14

Making/Answering Calls

Making calls	15
Answering calls	15
Useful features during a call	16
Key lock	17

Phonebook

Handset phonebook	18
Copying phonebook entries	19

Speed Dial

Speed dial	21
----------------------	----

Programming

Programmable settings	22
Special programming	27
Baby monitor	30
Registering a unit	32

Caller ID Service

Using Caller ID service	35
Caller list	35

SMS (Short Message Service)

Using SMS	37
Turning SMS on/off	37
Storing SMS message centre numbers	37
Sending a message	37

Receiving a message	38
Other settings	39

Voice Mail Service

Voice mail service	40
------------------------------	----

Intercom/Locator

Intercom	41
Handset locator	41
Transferring calls, conference calls	41

Using Bluetooth devices

Using Bluetooth devices	42
Copying phonebook entries from a Bluetooth mobile phone (phonebook transfer)	42
Using a Bluetooth wireless headset (optional)	43

Useful Information

Character entry	45
Error messages	47
Troubleshooting	48
Wall mounting	53
Declaration of conformity form	54
LCD full descriptions	55

Tárgymutató

 
Tárgymutató	58
-----------------------	----

Introduction**Accessory information****Supplied accessories**

No.	Accessory item/Part number	Quantity
①	AC adaptor/PNLV226CE	2
②	Telephone line cord	1
③	Rechargeable batteries* ¹	2
④	Handset cover* ²	1
⑤	Belt clip	1
⑥	Charger	1

*1 See 3. oldal for replacement battery information.

*2 The handset cover comes attached to the handset.

**Additional/replacement accessories**

Please contact your nearest Panasonic dealer for sales information.

Accessory item	Model number
Rechargeable batteries	HHR-4NGE (P03P) or HHR-4MRE (P03I)* ¹ Battery type: – Nickel metal hydride (Ni-MH) – 2 x AAA (R03) size for each handset
DECT repeater	KX-A405


*1 Replacement batteries may have a different capacity from that of the supplied batteries.

Expanding your phone system

You can expand your phone system by registering optional handsets (6 max.) to a single base unit.

- Optional handsets may be a different colour from that of the supplied handsets.

Handset (optional): KX-TGA860FX

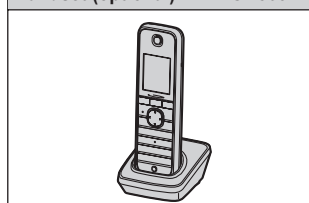

Introduction

General information

- This equipment is designed for use on the Poland and Hungary analogue telephone network.
- In the event of problems, you should contact your equipment supplier in the first instance.

Declaration of Conformity:

- Panasonic System Networks Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

<http://www.doc.panasonic.de>

Contact to Authorised Representative:

Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

For your future reference

We recommend keeping a record of the following information to assist with any repair under warranty.

Serial No.

Date of purchase

(found on the back of the base unit)

Name and address of dealer

Attach your purchase receipt here.

Important Information

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Use only the power source marked on the product.
- Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre.
- Unplug from power outlets and never touch the inside of the product if its casing has been broken open.
- Never touch the plug with wet hands. Danger of electric shock exists.

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects.

Operating safeguards

- Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.
- Do not disassemble the product.
- Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to

become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use.

- The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss.

Medical

- Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in the frequency range of 1.88 GHz to 1.90 GHz, and the RF transmission power is 250 mW (max.).)
- Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

CAUTION

Installation and location

- Never install telephone wiring during an electrical storm.
- Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- This product is unable to make calls when:
 - the handset batteries need recharging or have failed.
 - there is a power failure.
 - the key lock feature is turned on.

Battery

- We recommend using the batteries noted on 3. oldal. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
- Do not mix old and new batteries.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings,

Important Information

- bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible charger to charge the batteries. Do not tamper with the charger. Failure to follow these instructions may cause the batteries to swell or explode.

Important safety instructions

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Do not use this product near water for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

For best performance

Base unit location/avoiding noise

The base unit and other compatible Panasonic units use radio waves to communicate with each other.

- For maximum coverage and noise-free communications, place your base unit:
 - at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
 - away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones.
 - facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations. (Avoid putting the base unit on a bay window or near a window.)

- Coverage and voice quality depends on the local environmental conditions.
- If the reception for a base unit location is not satisfactory, move the base unit to another location for better reception.

Environment

- Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.
- The product should be kept free from excessive smoke, dust, high temperature, and vibration.
- The product should not be exposed to direct sunlight.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long period of time, unplug the product from the power outlet.
- The product should be kept away from heat sources such as radiators, cookers, etc. It should not be placed in rooms where the temperature is less than 0 °C or greater than 40 °C. Damp basements should also be avoided.
- The maximum calling distance may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc.
- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.

Routine care

- Wipe the outer surface of the product with a soft moist cloth.
- Do not use benzine, thinner, or any abrasive powder.


Other information

Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

Important Information

Information for Users on Collection and Disposal of Old Equipment and used Batteries

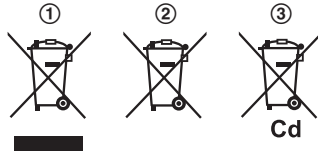

These symbols (①, ②, ③) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

These symbols (①, ②, ③) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol

This symbol (②) might be used in combination with a chemical symbol (③). In this case it complies with the requirement set by the Directive for the chemical involved.

Trademarks

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under licence. All other

trademarks identified herein are the property of their respective owners.

Specifications

- **Standard:**
DECT (Digital Enhanced Cordless Telecommunications),
GAP (Generic Access Profile),
Bluetooth wireless technology 2.0
 - **Frequency range:**
1.88 GHz to 1.90 GHz (DECT)
2.402 GHz to 2.48 GHz (Bluetooth)
 - **RF transmission power:**
Approx. 10 mW (average power per channel)
 - **Power source:**
220–240 V AC, 50/60 Hz
 - **Power consumption:**
Base unit:
Standby: Approx. 0.4 W
Maximum: Approx. 0.8 W
Charger:
Standby: Approx. 0.1 W
Maximum: Approx. 1.8 W
 - **Operating conditions:**
0 °C–40 °C, 20 %–80 % relative air humidity (dry)
- Megjegyzés:**
- Design and specifications are subject to change without notice.
 - The illustrations in these instructions may vary slightly from the actual product.



Getting Started

Setting up

Connections


- Use only the supplied Panasonic AC adaptor PNLV226CE.

■ Base unit

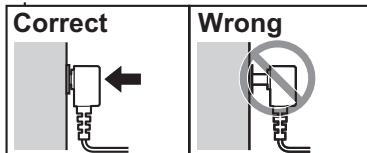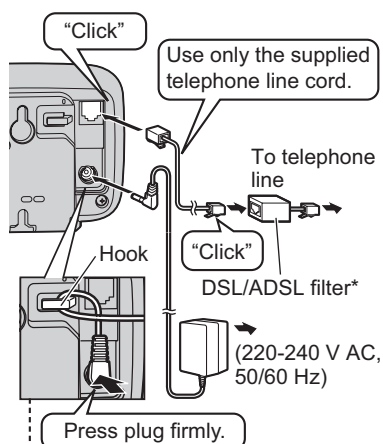


*DSL/ADSL filter (not supplied) is required if you have DSL/ADSL service.

■ Charger

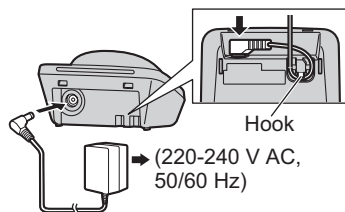

Battery installation

- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Confirm correct polarities (\oplus , \ominus).

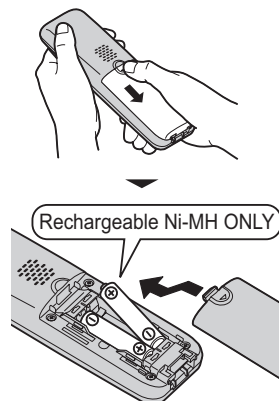

- When the language selection is displayed, see 13. oldal.

Battery charging

Charge for about 7 hours.

- When the batteries are fully charged, the charge indicator goes off and "Töltés kész" is displayed.

Confirm "Feltöltés alatt" is displayed.

Charge indicator



Getting Started**Note when setting up****Note for connections**

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

During a power failure

The unit will not work during a power failure. We recommend connecting a corded-type telephone (without AC adaptor) to the same telephone line or to the same telephone line jack, if you have such a telephone jack in your house.




Note for battery installation


- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on 3, 5. oldal.
- Wipe the battery ends (+, -) with a dry cloth.
- Avoid touching the battery ends (+, -) or the unit contacts.

Note for battery charging

- It is normal for the handset to feel warm during charging.
- Clean the charge contacts of the handset and charger with a soft and dry cloth once a month. Clean more often if the unit is exposed to grease, dust, or high humidity.

Battery level

Icon	Battery level
	High
	Medium
	Low

Icon	Battery level
	Needs charging.

Panasonic Ni-MH battery performance (supplied batteries)

Operation	Operating time
In continuous use	12 hours max.
Not in use (standby)	250 hours max.


Megjegyzés:

- It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use).
- Actual battery performance depends on usage and ambient environment.
- Even after the batteries are fully charged, the handset can be left on the charger without any ill effect on the batteries.
- The battery level may not be displayed correctly after you replace the batteries. In this case, place the handset on the charger and let it charge for at least 7 hours.

Getting Started

Controls

Handset

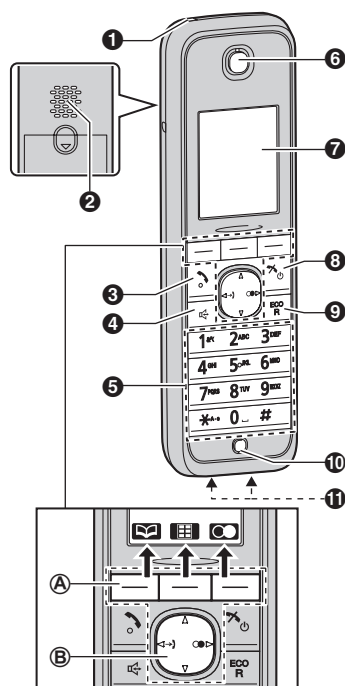

- ❶ Charge indicator
Ringer indicator
- ❷ Speaker
- ❸ [📞] (Talk)
- ❹ [📞] (Speakerphone)
- ❺ Dial keypad
- ❻ Receiver
- ❼ Display
- ❽ [🔌] (Off/Power)
- ❾ [ECO/R]
ECO: Eco mode shortcut key
R: Recall/Flash
- ❿ Microphone
- ⓫ Charge contacts

Control type


Ⓐ Soft keys

The handset features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display.

Ⓑ Navigator key

- [▲], [▼], [←], or [→]: Scroll through various lists and items.
- [▲] or [▼]: Adjust the receiver or speaker volume while talking.
- [←] (📞): Caller list: View the caller list.
- [→] (📞): Redial: View the redial list.
- As all multiple items cannot be displayed on screen at the same time, you can quickly search the desired item to move screens by pressing [→] or [←], instead of scrolling down or up line by line (14. oldal).

Base unit

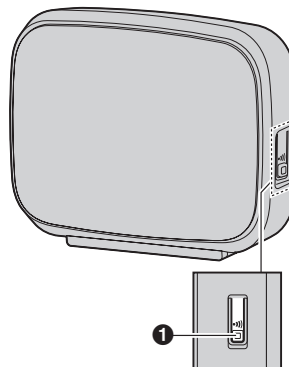

- ❶ [📍] (Locator)

Getting Started**Display****Handset display items**

Item	Meaning
	Range status: The more bars visible, the closer the handset is to the base unit.
	Out of base unit range
	Paging, intercom mode
	Speakerphone is on. (15. oldal)
	The line is in use. <ul style="list-style-type: none"> When flashing slowly: The call is put on hold. When flashing rapidly: An incoming call is now being received.
	Missed call* ¹ (35. oldal)
	The base unit transmission power is set to "Alacsony". (13. oldal)
	The key backlight is off. (25. oldal)
	Battery level
	Alarm is on. (27. oldal)
	Equalizer is set. (16. oldal)
	Privacy mode is on. (25. oldal)
	Ringer volume is off. (24. oldal)
	Night mode is on. (28. oldal)
	Blocked call* ¹ (28, 36. oldal)
	New SMS message received.* ² (38. oldal)
	New voice mail message received.* ³ (40. oldal)

Item	Meaning
	Bluetooth is activated. Ready to make/receive calls on a Bluetooth headset. (44. oldal)
	Making/Answering calls on Bluetooth headset. (44. oldal)
	Baby monitor is activated. The name/number displayed next to the icon indicates the monitoring unit. (30. oldal)
Vonal foglalt	Someone is using the line.

*1 Caller ID subscribers only

*2 SMS users only

*3 Voice mail subscribers only

Handset soft key icons

Icon	Action
	Returns to the previous screen or outside call.
	Displays the menu.
OK	Accepts the current selection.
	Displays a previously dialled phone number.
	Makes a call. (15. oldal)
	Temporarily turns off the ringer for incoming calls. (15. oldal)
12/24	Sets 24-hour or 12-hour clock format. (13. oldal)
	Switches the wallpaper to display with or without date and time. (26. oldal)
	Places a call on hold.
	Opens the phonebook.
	Allows you to edit phone numbers. (29, 36. oldal)

Getting Started

Icon	Action
	Adds new entry. (18, 21, 28. oldal)
	Displays the phonebook search menu.
	Turns the key lock feature off. (17. oldal)
	Stops alarm or schedule alarm. (27, 30. oldal)
	Snooze button on the alarm. (27. oldal)
	Selects a character entry mode.
	Selects entries, categories, or handsets. (20. oldal)
	Stores phone numbers. (28, 36. oldal)
	Inserts a dialling pause.
	Erases the selected item or returns to the outside call.
	Switches display mode between single item and multiple items. (14. oldal)
	Displays the detailed schedule.
	Displays the schedule list.
	Allows you to make an intercom call. (41. oldal)
	Erases a number/character.
	Puts the call on mute.

Handset main menu icons

The following icons are shown when you press down on the middle soft key in standby mode.

Icon	Feature
	Hívólista
	Csengő beállítása
	SMS (Short Message Service)

Icon	Feature
	Belső hívás
	Időbeállítás
	Bluetooth
	Bébiőr
	Kezdeti beállítás
	Naptár

Screen saver mode

The backlight goes dark when on a call or turns off completely after 1 minute of inactivity if the handset is not on the charger.

- Activate the handset display again by:
- pressing [◀] or [▶] when on a call.
 - pressing [📞] at all other times.

Turning the power on/off

Power on

Press [📞] for about 1 second.

Power off

Press [📞] for about 2 seconds.

Initial settings

■ Direct command code:

Programmable settings can be accessed by pressing (middle soft key), and then the corresponding code on the dial keypad (22. oldal).

Példa: Press (middle soft key)

1 0 1.

■ Symbol meaning:

Példa: [↕]: “κτ”

Press [▼] or [▲] to select the words in quotations.

Getting Started

Fontos:

- When you install the batteries for the first time, the handset may prompt you to set display language and region setting.
 - ① Perform step 2 in „Display language”, 13. oldal, and then press **OK**.
 - ② Continue from step 2 in „Changing the unit's region setting/Resetting the base unit”, 29. oldal.

Display language

The display language is preset to Polish. Sample displays shown in these operating instructions are shown in Hungarian.

- 1 **[M]** (middle soft key) **[#110]**
- 2 **[↓]**: Select your desired language. → **OK**
- 3 **[↶]**

Date and time

- 1 **[M]** (middle soft key) **[#101]**
- 2 Enter the current date, month, and year. → **OK**
Példa: 15 July, 2011
[15 07 11]
 - You can select the date format by pressing **[#]**:
 - dd/mm/yy (date/month/year)
 - yy/mm/dd
- 3 Enter the current hour and minute.
Példa: 9:30
[09 30]
 - You can select 24-hour or 12-hour clock format (“**AM**” or “**PM**”) by pressing **[12/24]**.
- 4 **OK** → **[↶]**

Megjegyzés:

- The date and time may be incorrect after a power failure. In this case, set the date and time again.

Dialling mode

If you cannot make calls, change this setting according to your telephone line service. The default setting is “**Tone (DTMF)**”.

“**Tone (DTMF)**”: For tone dial service.

“**Impulzusos**”: For rotary/pulse dial service.

- 1 **[M]** (middle soft key) **[#120]**
- 2 **[↓]**: Select the desired setting.
- 3 **OK** → **[↶]**

One touch eco mode

The **[ECO/R]** button on the handset enables you to activate the eco function with one touch.

By activating eco mode, your unit can reduce the base unit transmission power by up to 90% in standby mode.

You can turn on/off one touch eco mode by just pressing **[ECO/R]**. The default setting is “**Normál**”.

- When the one touch eco mode is on: “**Alacsony**” is temporarily displayed and **ECO** is shown on the handset display instead of **Y**.
- When the one touch eco mode is off: “**Normál**” is temporarily displayed and **ECO** goes off from the handset display.

Megjegyzés:

- When there is another cordless phone nearby and it is in use, the base unit transmission power may not be reduced.
- Activating one touch eco mode reduces the range of the base unit in standby mode.
- If you set the repeater mode to “**BE**” (34. oldal):
 - One touch eco mode is cancelled.
 - “**Takarékos beállítás**” is not shown in the display menu (24. oldal).

Display mode

You can select to display either a single item or multiple items on one screen at a time for the following features:

Getting Started


- handset main menu icons in function menu
- menu list, phonebook list, caller list, and redial list

Select the desired setting:




 
 
- “Több elem”: Multiple entries/all menu icons are shown on one screen at a time.
- “Egyetlen elem”: An entry/a menu icon is shown on one screen in large characters at a time.

The default setting is “Több elem”.

 




Using soft key (Temporarily switching the display mode)

You can temporarily switch the display mode by pressing  shown when viewing the lists or selecting menu icons.

Programming the display mode beforehand

- 1  (middle soft key)  1  2
- 2 : Select the desired setting. → **OK**
→ 


Megjegyzés:

- When in multiple items display mode, you can move screens by pressing  or , without scrolling down or up through the list:
 - Press  to go to the next screen.
 - Press  to return to the previous screen.
- When in multiple items display mode, you can switch the screen to confirm the detailed information by pressing .

Belt clip

■ To attach

■ To remove

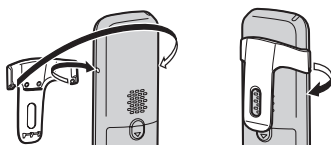

Making/Answering Calls

Making calls

- 1 Lift the handset and dial the phone number.
 - To correct a digit, press **C**.
- 2 Press **[↶]** or **[↷]**.
- 3 When you finish talking, press **[⏏]** or place the handset on the charger.

Using the speakerphone

- 1 Dial the phone number and press **[☎]**.
 - Speak alternately with the other party.
- 2 When you finish talking, press **[⏏]**.

Megjegyzés:

- For best performance, use the speakerphone in a quiet environment.
- To switch back to the receiver, press **[☎]/[↶]**.

Adjusting the receiver or speaker volume

Press **[▲]** or **[▼]** repeatedly while talking.

Making a call using the redial list

The last 10 phone numbers dialed are stored in the redial list (each 24 digits max.).

- 1 **[☐]** (right soft key) or **[▶]** (**[☐]**)
- 2 **[↕]**: Select the desired phone number.
→ **[X]**
- 3 **[↶]/[☎]**
 - If **[☎]** is pressed and the other party's line is engaged, the unit automatically redials multiple times. While the handset is waiting to redial, the ringer indicator flashes. To cancel, press **[⏏]**.

Erasing a number in the redial list

- 1 **[☐]** (right soft key) or **[▶]** (**[☐]**)
- 2 **[↕]**: Select the desired phone number.
→ **[X]**
- 3 **[↕]**: "IGEN" → **OK** → **[⏏]**

Pause (for PBX/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number

and/or PIN in the phonebook, a pause is also needed (19. oldal).

Példa: If you need to dial the line access number "0" when making outside calls with a PBX:

- 1 **[0]** → **P**
- 2 Dial the phone number. → **[↶]**

Megjegyzés:

- A 3 second pause is inserted each time **P** is pressed. Repeat as needed to create longer pauses.

Answering calls

When a call is being received, the ringer indicator flashes rapidly.

- 1 Lift the handset and press **[↶]** or **[☎]** when the unit rings.
 - You can also answer the call by pressing any dial key from **[0]** to **[9]**, **[*]**, or **#[**. (**Any key answer feature**)
- 2 When you finish talking, press **[⏏]** or place the handset on the charger.

Auto talk

You can answer calls simply by lifting the handset off the charger. You do not need to press **[↶]**. To turn this feature on, see 25. oldal.

Adjusting the handset ringer volume

■ While the handset is ringing for an incoming call:

Press **[▲]** or **[▼]** repeatedly to select the desired volume.

■ Programming the volume beforehand:

- 1 **[☐]** (middle soft key) **#[160]**
- 2 **[↕]**: Select the desired volume.
- 3 **OK** → **[⏏]**

Temporary handset ringer off

While the handset is ringing for a call, you can turn the ringer off temporarily by pressing **[Z]**.

Making/Answering Calls

Useful features during a call

Hold

This feature allows you to put an outside call on hold.

- 1 Press **[H]** during an outside call.
- 2 **[↕]**: "Tartás" → **OK**
- 3 To release hold, press **[↶]**.
 - Another handset user can take the call by pressing **[↶]**.

Megjegyzés:

- If a call is kept on hold for more than 9 minutes, an alarm tone starts to sound and the ringer indicator flashes rapidly. After 1 additional minute on hold, the call is disconnected.
- If another phone is connected to the same line, you can also take the call by lifting its handset.

Mute

While mute is turned on, you can hear the other party, but the other party cannot hear you.

- 1 Press **[M]** during conversation.
 - **[M]** flashes.
- 2 To return to the conversation, press **[M]** again.

Recall/flash

[ECO/R] allows you to use the special features of your host PBX such as transferring an extension call, or accessing optional telephone services.

Megjegyzés:

- To change the recall/flash time, see 25. oldal.

For call waiting or Call Waiting Caller ID service users

To use call waiting or Call Waiting Caller ID, you must first subscribe with your service provider/telephone company.

This feature allows you to receive calls while you are already talking on the phone. If you receive a call while on the phone, you will hear a call waiting tone.

If you subscribe to both Caller ID and Call Waiting with Caller ID services, the 2nd caller's information is displayed after you hear the call waiting tone on the handset.

- 1 Press **[ECO/R]** to answer the 2nd call.
- 2 To switch between calls, press **[ECO/R]**.

Megjegyzés:

- Please contact your service provider/telephone company for details and availability of this service in your area.

Temporary tone dialling (for rotary/pulse service users)

You can temporarily switch the dialling mode to tone when you need to access touch-tone services (for example, answering services, telephone banking services, etc.).

Press **[T]** before entering access numbers which require tone dialling.

Handset equalizer

This feature clarifies the voice of the person you are talking to, producing a more natural-sounding voice that is easier to hear and understand.

- 1 Press **[E]** while talking.
- 2 **[↕]**: "Hangtisztítás" → **OK**
- 3 **[↕]**: Select the desired setting.
- 4 Press **OK** to exit.

Megjegyzés:

- When this feature is turned on, **E** is displayed while talking.
- Depending on the condition and quality of your telephone line, this feature may emphasise existing line noise. If it

Making/Answering Calls

becomes difficult to hear, turn this feature off.

- This feature is not available while using the speakerphone.

Call share

You can join an existing outside call. To join the conversation, press **[↶]** when the other handset is on an outside call.

Megjegyzés:

- To prevent other users from joining your conversations with outside callers, turn the privacy mode on (25. oldal).

Key lock

The handset can be locked so that no calls or settings can be made. Incoming calls can be answered, but all other functions are disabled while key lock is on.

To turn key lock on, press **[🔒]** for about 3 seconds.

- **[🔒]** is displayed.
- To turn key lock off, press **[🔒]** for about 3 seconds.

Megjegyzés:

- Calls to emergency numbers cannot be made until key lock is turned off.

Phonebook

Handset phonebook

The phonebook allows you to make calls without having to dial manually. You can add 500 names and phone numbers, and assign each phonebook entry to the desired category.

The total number of entries that can be stored varies by the number of phone numbers stored for each entry, as shown below:

- 1 name + 1 phone number: 500 entries
- 1 name + 2 phone numbers: 250 entries
- 1 name + 3 phone numbers: 166 entries

Adding entries

- 1 (left soft key) →
- 2 [↕]: "Név" → OK
- 3 Enter the party's name (16 characters max.). → OK
 - You can change the character entry mode by pressing (45. oldal).
- 4 [↕]: "(Telefonszám 1)" → OK
 - You can store up to 3 phone numbers for each entry.
- 5 Enter the party's phone number (24 digits max.). → OK
- 6 [↕]: "Kategória 1" → OK
- 7 [↕]: Select the desired category. → OK
- 8 [↕]: "<Mentés>" → OK
 - To add other entries, repeat from step 2.
- 9

Categories

Categories can help you find entries in the phonebook quickly and easily. When adding an entry to the phonebook, you can assign it to one of 9 categories. You can change the names of categories assigned for phonebook entries ("Friends", "Family", etc.) and then search for phonebook entries by category. The category ringer tone feature is available for Caller ID subscribers (35. oldal).

Changing category names

- 1 (left soft key) →
- 2 [↕]: "Kategória" → OK
- 3 [↕]: Select the desired category. → OK
- 4 [↕]: "Kategória név" → OK
- 5 Edit the name (10 characters max.; 45. oldal). → OK →

Finding and calling from a phonebook entry

Scrolling through all entries

- 1 (left soft key)
- 2 [↕]: Select the desired entry. →
 - You can scroll through the phonebook entry by pressing and holding [▼] or [▲].
- 3 [↕]: Select the desired phone number. →

Searching by first character

- 1 (left soft key)
 - Change the character entry mode if necessary:
 - [↕]: "Karakter készlet" → OK → [↕]: Select the character entry mode. → OK
- 2 Press the dial key ([0] to [9], or [#]) which contains the character you are searching for (45. oldal).
 - Press the same dial key repeatedly to display the first entry corresponding to each character located on that dial key.
 - If there is no entry corresponding to the character you selected, the next entry is displayed.
- 3 [↕]: Scroll through the phonebook if necessary. →
- 4 [↕]: Select the desired phone number. →

Phonebook

Searching by query

You can narrow down the search to enter the first characters of a name.

- 1 (left soft key) →
- 2 To search for the name, enter the first characters (up to 4) in uppercase (45. oldal). → **OK**
 - Characters cannot be entered in lowercase.
 - If there is no entry corresponding to the characters you selected, the next entry is displayed.
- 3 : Scroll through the phonebook if necessary. →
- 4 : Select the desired phone number. →

Searching by category

- 1 (left soft key) →
- 2 : "Kategória" → **OK**
- 3 : Select the desired category. → **OK**
 - If you select "Minden", the unit ends the category search.
- 4 : Scroll through the phonebook if necessary. →
- 5 : Select the desired phone number. →

Editing entries

- 1 Find the desired entry (18. oldal). →
- 2 : "Szerkesztés" → **OK**
- 3 : Select the desired item you want to change. → **OK**
- 4 **To change the name and phone number:**
Edit the name or phone number. → **OK**
To change the category:
: Select the desired category. → **OK**
- 5 : "<Mentés>" → **OK** →

Erasing entries

Erasing an entry

- 1 Find the desired entry (18. oldal).
- 2 → : "IGEN" → **OK** →

Erasing all entries

- 1 (left soft key) →
- 2 : "Mindent töröl" → **OK**
- 3 : "IGEN" → **OK**
- 4 : "IGEN" → **OK** →

Chain dial

This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually.

- 1 During an outside call, press .
- 2 : "Telefonkönyv" → **OK**
- 3 : Select the desired entry. →
- 4 : Select the desired phone number.
- 5 Press to dial the number.

Megjegyzés:

- When storing a calling card access number and your PIN in the phonebook as one phonebook entry, press **P** to add pauses after the number and PIN as necessary (15. oldal).
- If you have rotary/pulse service, you need to press before pressing in step 1 to change the dialling mode temporarily to tone. When adding entries to the phonebook, we recommend adding to the beginning of phone numbers you wish to chain dial (18. oldal).

Copying phonebook entries

You can copy phonebook entries between 2 handsets.*1

*1 Panasonic compatible handset



 
 

 
 

Phonebook

Megjegyzés:

- Category settings for phonebook entries are not copied.






Copying multi entries

You can copy selected entries (up to 100).

- 1  (left soft key) → 
- 2 : "Másolás" → **OK**
- 3 : Select the desired entry. → 
 - The selected entries are indicated by "✓".
 - To continue copying other entries, perform this step repeatedly.
 - To cancel an entry, press  or  to select the entry, then press .
 - You can also search for another entry by entering the first character (18. oldal).
- 4 After selecting entries, press **OK**.
- 5 Enter the handset number you want to copy to.
 - When the entries have been copied, "Kész" is displayed.

6

Copying all entries

- 1  (left soft key) → 
- 2 : "Összes másolása" → **OK**
- 3 : Select the handset you want to send the phonebook entry to. → **OK**
 - When all entries have been copied, "Kész" is displayed.
- 4 

Speed Dial**Speed dial**

You can assign 1 phone number to each of the dial keys ([1] to [9]) on the handset.

Adding a phone numbers to a speed dial key

- 1 Press and hold the desired speed dial key ([1] to [9]). → **OK**
- 2 Enter the party's name (16 characters max.). → **OK**
 - You can change the character entry mode by pressing **[1/A/2]** (45. oldal).
- 3 Enter the party's phone number (24 digits max.). → **OK** 2 times

Assigning a phonebook entry to a speed dial key

- 1 Find the desired entry (18. oldal). → **[F4]**
- 2 **[↵]**: "Gyorshívó" → **OK**
- 3 **[↵]**: Select the desired phone number. → **OK**
- 4 **[↵]**: Select the desired dial key number. → **OK**
 - Where a dial key is already being used for speed dialling, "✓" is displayed next to the dial key number. If you select this dial key, "Felülírás" is displayed. To overwrite with the currently selected phone number, go to step 5.
- 5 **OK** → **[↵]**

Megjegyzés:

- If you edit a phonebook entry which is assigned to a speed dial key, the edited entry does not transfer to the speed dial key.

Editing an entry

- 1 Press and hold the desired speed dial key ([1] to [9]).
 - You can view other speed dial assignments by pressing **[v]** or **[▲]**.

- 2 **[F4]** → **[↵]**: "Szerkesztés" → **OK**
- 3 Edit the name if necessary (16 characters max.; 45. oldal). → **OK**
- 4 Edit the phone number if necessary (24 digits max.). → **OK** 2 times

Erasing an entry

- 1 Press and hold the desired speed dial key ([1] to [9]).
- 2 **[F4]** → **[↵]**: "Törlés" → **OK**
- 3 **[↵]**: "IGEN" → **OK**
- 4 **[↵]**

Viewing speed dial key assignments

You can see the speed dial key assignments on the handset display.

Press and hold the desired speed dial key ([1] to [9]).

Making a call using a speed dial key


- 1 Press and hold the desired speed dial key ([1] to [9]).
- 2 **[↵]**

Programming



Programmable settings

You can customise the unit by programming the following features using the handset. To access the features, there are 2 methods.


■ Scrolling through the display menus

- 1  (middle soft key)
- 2 Press [**▼**], [**▲**], [**▶**], or [**◀**] to select the desired main menu. → **OK**
- 3 Press [**▼**] or [**▲**] to select the desired item from the next sub-menus. → **OK**
- 4 Press [**▼**] or [**▲**] to select the desired setting. → **OK**
 - This step may vary depending on the feature being programmed.
 - To exit the operation, press [**✕**].


■ Using the direct command code


- 1  (middle soft key) → Enter the desired code.
Példa: Press  (middle soft key) **#101**.
- 2 Select the desired setting. → **OK**
 - This step may vary depending on the feature being programmed.
 - To exit the operation, press [**✕**].

Megjegyzés:


- In the following table, < > indicates the default settings.
- In the following table,  indicates the reference page number.
- Display menu order and sub-menu may vary depending on your model.
- For LCD full descriptions, see 55. oldal.


Display the menu tree and direct command code table


Main menu:  "Hívólista"

 
Operation	Code	
Viewing the caller list.	#213	35


Main menu:  "Csengő beállítása"


Sub-menu 1	Sub-menu 2	Settings	Code	
Csengő hangereje ^{*1}	–	0–6: Off–6 <6>	#160	15
Csengőhang ^{*2, *3}	–	<Csengőh. 1>	#161	–
Éjszakai mód	Be/Ki	1: BE 0: <KI>	#238	27
	Kezdés/Befejezés	<23:00/06:00>	#237	28
	Csengetés késleltetés	1: 30 mp. 2: <60 mp.> 3: 90 mp. 4: 120 mp. 0: Nincs cseng.	#239	28
	Kategória kiválasztása	1–9: Kategória 1–9	#241	28


ProgrammingMain menu:  "SMS"

Sub-menu 1	Sub-menu 2	Settings	Code	
Fogadott lista	–	–	#350	38
Küldött lista	–	–		38
Új üzenet	–	–		37
Beállítások	1.Üzenet központ ^{*4}	–	#351	37
	2.Üzenet központ ^{*4}	–	#352	37
	Fővonal száma ^{*4}	<KI>	#356	39
	SMS BE/KI ^{*4}	<KI>	#357	37


Main menu:  "Belső hívás"

Operation	Code	
Paging the desired unit.	#274	41

Main menu:  "Időbeállítás"

Sub-menu 1	Sub-menu 2	Settings	Code	
Dátum/idő beállítása ^{*4}	–	–	#101	13
Memo figyelmeztet.	1–5: Ébresztés1-5	1: Egyszer 2: Naponta 3: Hetente 0: <KI>	#720	27
Idő beállítás ^{*4, *5}	–	1: Hívóazonosít 0: <Manuális>	#226	–

Main menu:  "Bluetooth"

Sub-menu 1	Sub-menu 2	Settings	Code	
Be/Ki	–	1: BE 0: <KI>	#613	42
Telefonkönyv másolás ^{*6}	Cellatelefon ^{*7}	–	#618	42
	Másik készülék/ Készülék váltás	–		42
Fejbeszélő ^{*6}	Új készülék hozzáadás ^{*7}	–	#621	43
	Kapcsolódás/ Lekapcsolódás	–	#622	44
	Regisztrálás	–	#621	43
	Kijelentkezés ^{*8}	–	#134	44
PIN kód beállítás ^{*6}	–	<0000>	#619	43

Programming

Main menu: ☺ "Bébiór"

Sub-menu 1	Sub-menu 2	Settings	Code	
Be/Ki	–	1: BE 0: <KI>	#268	31
Érzékenység	–	<Middle>	#269	32

Main menu: 🐘 "Kezdeti beállítás"

Sub-menu 1	Sub-menu 2	Settings	Code	
Csengő beállítása	Csengő hangereje ^{*1}	0–6: Off–6 <6>	#160	15
	Csengőhang ^{*2, *3}	<Csengőh. 1>	#161	–
	Éjszakai mód – Be/Ki	1: BE 0: <KI>	#238	27
	Éjszakai mód – Kezdés/Befejezés	<23:00/06:00>	#237	28
	Éjszakai mód – Csengetés késleltetés	1: 30 mp. 2: <60 mp.> 3: 90 mp. 4: 120 mp. 0: Nincs cseng.	#239	28
	Éjszakai mód – Kategória kiválasztása	1–9: Kategória 1–9	#241	28
Időbeállítás	Dátum/idő beállítása ^{*4}	–	#101	13
	Memo figyelmeztet.	1–5: Ébresztés1–5	#720	27
	Idő beállítás ^{*4, *5}	1: Hívóazonosít 0: <Manuális>	#226	–
Kézibeszélő neve	–	–	#104	28
Bejövő szám tiltása ^{*4}	–	–	#217	28
Takarékos beállítás	Adási teljesítmény ^{*4}	1: <Normál> 2: Alacsony	#725	13

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Kijelző beállítása	Tapéta ^{*9}	<Tapéta1>	#181	–
	Háttérszín	1: <Szín1> 2: Szín2	#182	–
	Kijelző mód	1: <Több elem> 0: Egyetlen elem	#192	14
	Billentyűzet háttérvil.	1: <BE> 0: KI	#276	–
	LCD töltésnél ^{*10} (LCD backlight)	1: <BE> 0: KI	#191	–
	Kontraszt (Display contrast)	1–6: Kontraszt 1–6 <Kontraszt 3>	#145	–
Aut. belső hívás	–	1: BE 0: <KI>	#273	41
Billentyűhang ^{*11}	–	1: <BE> 0: KI	#165	–
Hívás korlátozás ^{*4}	–	–	#256	29
Automatikus hívásfogadás ^{*12}	–	1: BE 0: <KI>	#200	15
Vonal beállítása	Tárcsázási mód ^{*4}	1: Impulzusos 2: <Tone (DTMF)>	#120	13
	Flash ^{*4, *13}	0: 900 msec. 1: 700 msec. 2: 600 msec. 3: 400 msec. 4: 300 msec. 5: 250 msec. *: 200 msec. #: 160 msec. 6: 110 msec. 7: <100 msec.> 8: 90 msec. 9: 80 msec.	#121	16
Privát mód ^{*4, *14}	–	1: BE 0: <KI>	#194	–
Bázis PIN-kód ^{*4}	–	<0000>	#132	29
Átjátszó mód ^{*4}	–	1: BE 0: <KI>	#138	34

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Regisztrálás	Kézipeszelő regisztrálás	–	#130	33
	Kijelentkezés ^{*8}	–	#131	33
Ország ^{*4}	–	1: <Polska> 2: Magyarország	#136	29
Bázis kiválasztása	–	<Automata>	#137	33
Bázis törlése ^{*8}	–	–	#139	33
Nyelv kiválaszt.	Kijelző	<Polski>	#110	13

Main menu: "Naptár"

Operation	Code	
Viewing the calendar and setting the schedule alarm.	#727	30

*1 Ringer volume cannot be turned off for alarm, intercom calls, and paging.

*2 If you select one of the melody ringer tones, the ringer tone continues to play for several seconds even if the caller has already hung up. You may either hear a dial tone or no one on the line when you answer the call.

*3 The preset melodies in this product are used with permission of © 2011 Copyrights Vision Inc.

*4 If you program these settings using one of the handsets, you do not need to program the same item using another handset.

*5 This feature allows the unit to automatically adjust the date and time each time caller information including date and time is received.

To turn this feature on, select "Hívóazonosít". To turn this feature off, select "Manuális". (Caller ID subscribers only)

To use this feature, set the date and time first (13. oldal).

*6 When Bluetooth mode is off, these menus are not displayed.

*7 After the Bluetooth device is registered, the device name is displayed.

*8 This menu is not displayed when scrolling through the display menus. It is only available in direct command code.

*9 You can set the wallpaper to display with or without date and time by pressing . The default setting is with date and time displayed.

*10 You can set the handset display backlight while on charge.

– "BE": Backlight is on (dimmed).

– "KI": Backlight turns off after 10 seconds of charging.

*11 Turn this feature off if you prefer not to hear key tones while you are dialling or pressing any keys, including confirmation tones and error tones.

*12 If you subscribe to a Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature.

*13 The recall/flash time depends on your telephone exchange or host PBX. Contact your PBX supplier if necessary.

*14 To prevent other users from joining your conversations with outside callers, turn this feature on.

Programming

Special programming

Alarm

An alarm sounds at the set time for 1 minute and is repeated 5 times at 5 minute intervals (snooze function). A total of 5 separate alarm times can be programmed for each handset. You can set one of 3 different alarm options (once, daily, or weekly) for each alarm time.

Fontos:

- Set the date and time beforehand (13. oldal).

- 1 **[M]** (middle soft key) **[#][7][2][0]**
- 2 Select an alarm by pressing **[1]** to **[5]**. → **OK**
- 3 **[↑/↓]**: Select the desired alarm option. → **OK**

"KI"
Turns alarm off. Go to step 9.
"Egyszer"
An alarm sounds once at the set time.
"Naponta"
An alarm sounds daily at the set time. Go to step 5.
"Hetente"
Alarm sounds weekly at the set time(s).

- 4 Proceed with the operation according to your selection in step 3.
 - **Once:**
Enter the desired date and month. → **OK**
 - **Weekly:**
[↑/↓]: Select the desired day of the week and press **[✓]**. → **OK**
- 5 Set the desired time. → **OK**
- 6 Enter a text memo (30 characters max.; 45. oldal). → **OK**
- 7 **[↑/↓]**: Select the desired alarm tone. → **OK**
 - We recommend selecting a different ringer tone from the one used for outside calls.

- 8 **[↑/↓]**: Select the desired snooze setting. → **OK**
- 9 **OK** → **[🔔]**
 - When the alarm is set, **🔔** is displayed.

Megjegyzés:

- Press **[🔔]** to stop the alarm completely.
- When the handset is in use, the alarm will not sound until the handset is in standby mode.
- Press any dial key, or **[📞]** to stop the sound but keep the snooze function activated.
- If you want to make an outside call when the snooze function is activated, please stop the snooze function before making the call.

Night mode

Night mode allows you to select a period of time during which the handset will not ring for outside calls. This feature is useful for time periods when you do not want to be disturbed, for example, while sleeping. Night mode can be set for each handset. Using the phonebook's category feature (18. oldal), you can also select categories of callers whose calls override night mode and ring the handset (Caller ID subscribers only).

Fontos:

- Set the date and time beforehand (13. oldal).
- If you have set the alarm, the alarm sounds even if the night mode is turned on.

Turning night mode on/off

- 1 **[M]** (middle soft key) **[#][2][3][8]**
- 2 **[↑/↓]**: Select the desired setting. → **OK**
 - If you select **"KI"**, press **[🔔]** to exit.
- 3 Enter the desired hour and minute you wish to start this feature. → **OK**
 - You can select 24-hour or 12-hour clock format (**"AM"** or **"PM"**) by pressing **12/24**.

Programming

- 4 Enter the desired hour and minute you wish to end this feature. → **OK**
- 5 **[*0]**
 - When the night mode is set, ☎ is displayed.

Changing the start and end time

- 1 **[*]** (middle soft key) **#237**
- 2 Continue from step 3, „Turning night mode on/off”, 27. oldal.

Setting the ring delay

This setting allows the handset to ring during night mode if the caller waits long enough. After the selected amount of time passes, the handset rings. If you select „Nincs cseng.”, the handset never rings during night mode.

- 1 **[*]** (middle soft key) **#239**
- 2 **[*]**: Select the desired setting. → **OK** → **[*0]**

Selecting categories to bypass night mode

- 1 **[*]** (middle soft key) **#241**
- 2 Select your desired categories by pressing **1** to **9**.
 - “✓” is displayed next to the selected category numbers.
 - To cancel a selected category, press the same dial key again. “✓” disappears.
- 3 **OK** → **[*0]**

Changing the handset name

Each handset can be given a customised name (“Bob”, “Kitchen”, etc.). This is useful when you make intercom calls between handsets. You can also select whether or not the handset name is displayed in standby mode. The default setting is “NEM”. If you select “IGEN” without entering any handset name, “Kézibesz. 1” to “Kézibesz. 6” is displayed.

- 1 **[*]** (middle soft key) **#104**

- 2 Enter the desired name (max. 10 characters; 45. oldal).
 - If not required, go to step 3.
- 3 **OK**
- 4 **[*]**: Select the desired setting. → **OK** 2 times
- 5 **[*0]**

Incoming call barring (Caller ID subscribers only)

This feature allows the unit to reject calls from specified phone numbers that you do not want to answer such as junk calls. When a call is received, the unit does not ring while the caller is being identified. If the phone number matches an entry in the call barred list, the unit sends out a busy tone to the caller, and then disconnects the call.

Fontos:

- When the unit receives a call from a number that is stored in the call barred list, the call is logged in the caller list (35. oldal) with ☎ after the call is disconnected.

Storing unwanted callers

You can store up to 30 phone numbers in the call barred list.

Fontos:

- You must store the phone number with an area code in the call barred list.

■ From the caller list:

- 1 **[*]** (middle soft key)
- 2 **[*]**: Select the entry to be barred. → **OK** → **[*]**
- 3 **[*]**: “Bejövő szám tiltása” → **OK**
- 4 **[*]**: “IGEN” → **OK** → **[*0]**

■ By entering phone numbers:

- 1 **[*]** (middle soft key) **#217** → **[*]**
- 2 Enter the phone number (24 digits max.). → **OK**
 - To erase a digit, press **C**.
- 3 **[*0]**

Programming

Viewing/editing/erasing bar call numbers

- 1 (middle soft key)
- 2 : Select the desired entry.
 - To exit, press .
- 3 **To edit a number:**
 → Edit the phone number. →
 →
- To erase a number:**
 → : "IGEN" → →

Megjegyzés:

- When editing, press the desired dial key to add, to erase.

Setting call restriction

You can restrict selected handsets from dialling certain numbers. You can assign up to 6 phone numbers to be restricted, and select which handsets are to be restricted. Storing area codes here prevents the restricted handsets from dialling any phone number in that area code.

- 1 (middle soft key)
- 2 Enter the base unit PIN (default: "0000").
 - If you forget your PIN, contact an authorised service centre.
- 3 Select the handsets to be restricted by pressing to .
 - All handsets registered to the base unit are displayed.
 - "✓" is displayed next to the selected handset numbers.
 - To cancel a selected handset, press the same dial key again. "✓" disappears.
- 4
- 5 Select a memory location by pressing to . →
- 6 Enter the phone number or area code to be restricted (8 digits max.). → →
 - To erase a restricted number, press .

Changing the base unit PIN (Personal Identification Number)

Fontos:

- If you change the PIN, please make note of your new PIN. The unit will not reveal the PIN to you. If you forget your PIN, contact an authorised service centre.

- 1 (middle soft key)
- 2 Enter the current 4-digit base unit PIN (default: "0000").
- 3 Enter the new 4-digit base unit PIN. → →

Changing the unit's region setting/Resetting the base unit

- 1 (middle soft key)
- 2 : Select the desired country. →

"Polska" = Poland
 "Magyarország" = Hungary

- 3 : "Tak" ("IGEN") → →

Megjegyzés:

- The following items will be deleted or reset to their default settings:
 - SMS settings (23. oldal)
 - Time Adjustment
 - Base unit transmission power
 - Privacy mode
 - Base unit PIN
 - Dial mode
 - Recall/flash time
 - All SMS messages
 - Caller list
 - Voice mail messages
 - Call restrict
- The following items will be retained:
 - Display language
 - Date and time
 - Handset name
 - Repeater mode
 - Call barred list
- After changing the unit's region setting/ resetting the base unit, is displayed on

Programming

the handset momentarily. This is normal and the handset can be used once Ψ is displayed.

Calendar/Schedule

You can program 20 schedule alarms for each handset using the calendar. A schedule alarm sounds at the set time for 1 minute. A text memo can also be displayed for the schedule alarm.

Fontos:

- Set the date and time beforehand (13. oldal).
- If the unit is connected to a PBX system, date information may not be properly received. Set the PBX system to receive the correct date information. Contact your PBX supplier if necessary.

Adding a new entry

- 1 [F5] (middle soft key) \rightarrow [OK]
- 2 [4] : Select the desired date. \rightarrow [OK]
 - To move to another month in the calendar, keep pressing [v] or [A] .
- 3 $\text{[F5]} \rightarrow \text{[4]}$: "Új bejegyzés" \rightarrow [OK]
- 4 Edit the date if necessary. \rightarrow [OK]
- 5 Set the desired time. \rightarrow [OK]
- 6 Enter a text memo (30 characters max.; 45. oldal). \rightarrow [OK]
- 7 [4] : Select the desired alarm tone. \rightarrow [OK] 2 times
 - You can select "KI" if you prefer not to hear an alarm tone.
 - We recommend selecting a different ringer tone from the one used for outside calls.
 - To add other entries, repeat from step 3.

8 [F5]

Megjegyzés:

- To stop the alarm, press [OFF] or place the handset on the charger.
- When the handset is in use, the alarm will not sound until the handset is in standby mode.

Viewing entries

- 1 [F5] (middle soft key) \rightarrow [OK]
- 2 To see the entries on the selected date, press [OK] .
To see the schedule list, press [F5] .
 - You can see detailed information about the schedule by pressing [F5] .

Editing an entry

- 1 [F5] (middle soft key) \rightarrow [OK]
- 2 $\text{[F5]} \rightarrow \text{[4]}$: Select the desired entry.
- 3 $\text{[F5]} \rightarrow \text{[4]}$: "Szerkesztés" \rightarrow [OK]
- 4 Edit the date if necessary. \rightarrow [OK]
- 5 Edit the time if necessary. \rightarrow [OK]
- 6 Edit the text memo if necessary (30 characters max.; 45. oldal). \rightarrow [OK]
- 7 [4] : Select the desired alarm tone. \rightarrow [OK] 2 times
- 8 [F5]

Erasing an entry

Schedule alarm entries are not erased automatically after the schedule alarm sounds. Erase unwanted entries.

- 1 [F5] (middle soft key) \rightarrow [OK]
- 2 $\text{[F5]} \rightarrow \text{[4]}$: Select the desired entry.
- 3 $\text{[F5]} \rightarrow \text{[4]}$: "Törlés" \rightarrow [OK]
- 4 [4] : "IGEN" \rightarrow [OK]
- 5 [F5]

Erasing all entries

- 1 [F5] (middle soft key) \rightarrow [OK]
- 2 $\text{[F5]} \rightarrow \text{[F5]}$
- 3 [4] : "Mindent töröl" \rightarrow [OK]
- 4 [4] : "IGEN" \rightarrow [OK]
- 5 [4] : "IGEN" \rightarrow [OK]
- 6 [F5]

Baby monitor

This feature allows you to listen in on a room where another handset is located, allowing you to easily monitor from different areas of the house or place. The monitored handset

Programming

(placed in a baby's room, for example) will automatically call the monitoring handset or the phone number stored when it detects sound.

Fontos:

- You should perform a test run of the baby monitor procedure to ensure that the baby monitor feature is set correctly. For example, test its sensitivity. Check the connection if you are diverting the baby monitor to an outside line.

Megjegyzés:

- Both the monitored and monitoring handsets must select the same base unit in order to use the baby monitor feature (33. oldal).
- The monitored handset cannot be used with a Bluetooth headset.
- If the unit is connected to a PBX system, you cannot set the baby monitor.
- During the monitoring mode, battery consumption is faster than usual. We recommend leaving the monitored handset on the charger.
- The monitored handset never rings during the monitoring mode.

Setting the baby monitor

Perform the setting operation with the handset to be monitored (for example, the handset placed in a baby's room).

To monitor with a handset

The internal baby monitor feature is only available between handsets in the same radio cell.

- Press **[M]** (middle soft key) **[#][2][6][8]**
- [<]: "BE" → OK**
- [<]:** Select the desired handset number to monitor with. → **OK**
 - "Bébiór" will be displayed.
 - The registered handset name/number is displayed.

Megjegyzés:

- When this feature is on, another handset can hear the monitored handset by making an intercom call.

To monitor from an outside line

■ From the phonebook:

- Press **[M]** (middle soft key) **[#][2][6][8]**
- [<]: "BE" → OK**
- [<]:** Select "Külső" to monitor from an outside line. → **[M]** → **[M]**
- [<]:** Select the phonebook entry. → **OK**
- [<]:** Select the desired phone number. → **OK**
 - "Bébiór" will be displayed.

Megjegyzés:

- If you edit a phonebook entry which is assigned for monitoring, the edited entry does not transfer to the monitor.

■ By entering phone numbers:

- Press **[M]** (middle soft key) **[#][2][6][8]**
- [<]: "BE" → OK**
- [<]:** Select "Külső" to monitor from an outside line. → **[M]** → **[M]**
- Enter the desired name (16 characters max.; 45. oldal). → **OK**
- Enter the desired number (24 digits max.). → **OK** 2 times
 - "Bébiór" will be displayed.

Megjegyzés:

- The registered name/number is displayed.

Turning off the baby monitor

The monitored handset cannot be used while baby monitor is set to "BE".

- Press **[M]** on the handset being monitored.
- [<]: "Be/Ki" → OK**
- [<]: "KI" → OK → [T]**

Editing an outside monitoring number

- Press **[M]** on the handset being monitored.
- [<]: "Be/Ki" → OK**

Programming

- 3 [↕]: "BE" → OK
- 4 [↕]: Select the outside line. →
- 5 → [↕]: "Szerkesztés" → OK
- 6 Edit the name if necessary (16 characters max.; 45. oldal). → OK
- 7 Edit the phone number if necessary (24 digits max.). → OK 2 times

Erasing an outside monitoring number

- 1 Press on the handset being monitored.
- 2 [↕]: "Be/Ki" → OK
- 3 [↕]: "BE" → OK
- 4 [↕]: Select the outside line. →
- 5 → [↕]: "Törlés" → OK
- 6 [↕]: "IGEN" → OK

Baby monitor sensitivity

You can adjust the sensitivity of the baby monitor. Increase or decrease the sensitivity to adjust the sound level needed to trigger the baby monitor feature.

- This feature cannot be set during a monitoring call.
- 1 Press on the handset being monitored.
 - 2 [↕]: "Érzékenység" → OK
 - 3 Press [▲] or [▼] to select the desired setting. → OK →

Megjegyzés:

- When the baby monitor is activated, you cannot access the direct commands using the monitored handset. Before setting the baby monitor feature, you can use direct commands to adjust baby monitor sensitivity (24. oldal).

Answering the baby monitor

■ When monitoring with a handset:

Press [] to answer calls.

If you want to respond from the monitoring handset, press .

- The monitoring handset will answer calls automatically when the auto intercom feature is set to "BE" (41. oldal).

Megjegyzés:

- If you receive an outside call when communicating with the monitored handset, you hear 2 tones. To answer the call, press [], then press [].

■ When monitoring from an outside line:

To answer a call, follow the operation for your phone.

If you want to respond from the monitoring handset, press [1] using tone dialling.

You can turn off the baby monitor feature by pressing [0].

Megjegyzés:

- 2 minutes after the monitored handset starts a call, communication between the monitored handset and monitoring phone line is turned off automatically.

Registering a unit

Operating additional units

Additional handsets

Up to 6 handsets can be registered to a single base unit.

Fontos:

- The additional handset model recommended for use with this unit is noted on 3. oldal. If another handset model is used, certain operations may not be available.

Additional base units

Handsets can be registered to up to 4 base units, allowing you to add additional base units and extend the area in which your handset(s) can be used. If a handset moves out of range of its base unit when "Automata" is selected on base unit (33. oldal), it looks for another base unit to make or receive calls. A base unit and the handsets it communicates with is called a "radio cell".

Programming

Megjegyzés:

- Calls are disconnected when the handset moves from one radio cell to another.

Registering a handset to a base unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit (for example, is displayed even when the handset is near the base unit), re-register the handset.

1 Handset:

(middle soft key) **#130**

2 : Select a base unit number. → **OK**

- This number is used by the handset as a reference only.

3 Base unit:

Press and hold **[M]** for about 5 seconds. (No registration tone)

- If all registered handsets start ringing, press **[M]** again to stop, then repeat this step.
- The next step must be completed within 90 seconds.

4 Handset:

OK → Wait until “**Bázis PIN**” is displayed. → Enter the base unit PIN (default: “0000”). → **OK**

- If you forget your PIN, contact an authorised service centre.
- When the handset has been registered successfully, is displayed.

Megjegyzés:

- While registering, “**Bázisállomás regisztráció**” is displayed on all registered handsets.
- When you purchase an additional handset, refer to the additional handset's installation manual for registration.

Selecting a base unit

When “**Automata**” is selected, the handset automatically uses any available base unit it is registered to. When a specific base unit is

selected, the handset makes and receives calls using that base unit only. If the handset is out of range of that base unit, no calls can be made.

1 (middle soft key) **#137**

2 : Select the desired base unit number, or “**Automata**”. → **OK**

- The handset starts searching for the base unit.

Deregistering a handset

A handset can cancel its own registration to the base unit, or other handsets registered to the same base unit. This allows the handset to end its wireless connection with the system.

1 (middle soft key) **#131**

- All handsets registered to the base unit are displayed.

2 : Select the handset you want to cancel. → **OK**

3 : “**IGEN**” → **OK**

- A confirmation tone sounds.
- The handset does not beep when cancelling its own registration.

4 **[*0]**

Cancelling a base unit

A handset can cancel a base unit that it is registered to. This allows the base unit to end its wireless connection with the system.

1 (middle soft key) **#139**

2 : Select the base unit you want to cancel. → **OK**

3 : “**IGEN**” → **OK** → **[*0]**

Megjegyzés:

- To register a handset to another base unit or to the same base unit again, see 33. oldal.

Increasing the range of the base unit

You can increase the signal range of the base unit by using a DECT repeater. Please use only the Panasonic DECT repeater noted on


Programming

3. oldal. Contact your Panasonic dealer for details.



Fontos:

- Before registering the repeater to this base unit, you must turn the repeater mode on.
- Do not use more than one repeater at a time.

Setting the repeater mode

- 1  (middle soft key) **#138**
- 2 **[↓]**: Select the desired setting. → **OK**
→ **[↶⓪]**

 
 
Megjegyzés:

- After turning the repeater mode on or off,  is displayed on the handset momentarily. This is normal and the handset can be used once  is displayed.

Registering the DECT repeater (KX-A405) to the base unit

Megjegyzés:

- Please use a repeater that has not yet been registered to another unit. If the repeater is registered to another unit, deregister it first, referring to the Installation Guide for the DECT repeater.

- 1 **Base unit:**
Press and hold **[↶⓪]** for about 5 seconds. (No registration tone)
 - The next step must be completed within 90 seconds.
- 2 **DECT repeater:**
Connect the AC adaptor, then wait until the  indicator and  indicator light green.
- 3 **Base unit:**
To exit the registration mode, press **[↶⓪]**.

Caller ID Service

Using Caller ID service

Fontos:



 
- This unit is Caller ID compatible. To use Caller ID features, you must subscribe to a Caller ID service. Contact your service provider/telephone company for details.

Caller ID features


 
When an outside call is being received, the caller's phone number is displayed. Caller information for the last 50 callers is logged in the caller list from the most recent call to the oldest.

- If the unit cannot receive caller information, the following is displayed:
 - “**Nincs szám**”: The caller dials from an area which does not provide a Caller ID service.
 - “**Privát hívó**”: The caller requests not to send caller information.
- If the unit is connected to a PBX system, caller information may not be properly received. Contact your PBX supplier.

Missed calls

If a call is not answered, the unit treats it as a missed call and  is displayed. This lets you know if you should view the caller list to see who called while you were away. Even if only one missed call in the caller list is viewed (35. oldal),  disappears from the display. When you receive another new call,  is displayed again.

Megjegyzés:

- Even when there are unviewed missed calls,  disappears from the standby display if the following operation is performed by one of the registered handsets:
 - Being replaced on the charger.
 - Pressing [.



 

 
 

Phonebook name display

When caller information is received and it matches a phone number stored in the phonebook, the stored name in the phonebook is displayed and logged in the caller list.

Category ringer tone

This feature can help you identify who is calling by using different ringer tones for different categories of callers. When adding an entry to the phonebook, you can assign it to the desired category (18. oldal). When a call is received from a caller assigned to a category, the ringer you selected for that category rings after caller information is displayed.

If you select “**Alapért. csengőhang**”, the unit uses the ringer tone you selected on 24. oldal when calls from this category are received. The default setting is “**Alapért. csengőhang**”.


 
- 1  (left soft key) → 
- 2 []: “**Kategória**” → **OK**
- 3 []: Select the desired category. → **OK**
- 4 []: Select the current setting of the category ringer tone. → **OK**
- 5 []: Select the desired ringer tone. → **OK**
- 6 [.

Caller list

Fontos:

- Only 1 person can access the caller list at a time.
- Make sure the unit's date and time setting is correct (13. oldal).

Viewing the caller list and calling back

- 1 [] ()

Caller ID Service

- 2 Press [▼] to search from the most recent call, or press [▲] to search from the oldest call.

- You can see the detailed information about the caller by pressing [F4] when in multiple display mode.

- 3 To call back, press [↶].
To exit, press [X].

Megjegyzés:

- If the entry has already been viewed or answered, "✓" is displayed, even if it was viewed or answered using another handset.
- If the call matches an entry in the call barred list, the number is logged with 2 (28. oldal).

Editing a caller's phone number before calling back

- 1 [◀] (→)
- 2 [↑]: Select the desired entry. → OK
- 3 [F4] → Edit the number.
• Press dial key ([0] to [9]) to add, [C] to delete.
- 4 [↶]

Erasing selected caller information

- 1 [◀] (→)
- 2 [↑]: Select the desired entry.
- 3 [X] → [↑]: "IGEN" → OK → [X]

Erasing all caller information

- 1 [◀] (→)
- 2 [X] → [↑]: "IGEN" → OK → [X]

Storing caller information to the phonebook

- 1 [◀] (→)
- 2 [↑]: Select the desired entry. → OK → [F4]
- 3 [↑]: "Telefonkönyv" → OK
- 4 To store the name, continue from step 3, „Editing entries”, 19. oldal.

SMS (Short Message Service)

Using SMS

SMS allows you to send and receive text messages between other fixed-line and mobile phones that support compatible SMS networks and features.

Fontos:

- To use SMS features, you must:
 - subscribe to a Caller ID and/or an appropriate service such as SMS.
 - confirm that SMS is turned on.
 - confirm that the correct message centre numbers are stored.


 
 

 


Contact your service provider/telephone company for details and availability.

Megjegyzés:

- A total of 47 messages (at 160 characters/ message) can be saved. Total number may be more than 47 if length of messages is less than 160 characters/ message.
- If the unit is connected to a PBX system, you may not be able to use SMS features.


 
 


 
 

Turning SMS on/off



The default setting is "KI".

- 1  (middle soft key)   
- 2 : Select the desired setting. →  → 

Storing SMS message centre numbers

SMS message centre numbers must be stored in order to send and receive SMS messages. Contact your service provider/ telephone company for more information.

- 1 **To store "1. üzenet központ":**
 (middle soft key)   
To store "2. üzenet központ":
 (middle soft key)   




 



 

- 2 Edit the number as necessary. →  → 


 
 
Megjegyzés:

 


- For PBX users:
 - You need to add the PBX line access number and a dialling pause to the beginning of the Message Centre 1 number.
 - If you only use the Message Centre 1 number for SMS, store the Message Centre 1 number as is (without adding a line access number or dialling pause) to Message Centre 2.


 
 
 

 


Sending a message

Writing and sending a new message

- 1  (middle soft key) →  → 
- 2 : "Új üzenet" → 
 - If "Szöveg marad?" is displayed, you can use the text from the last message you created by pressing .
- 3 Enter a message. → 
 - You can change the character entry mode by pressing  (45. oldal).
- 4 Enter the destination phone number (20 digits max.). → 

To use the redial list:
 (●) → : Select the phone number. →  2 times

To use the caller list:
 (→) → : Select the party. →  2 times

To use the phonebook:
 → : Select the phonebook entry. →  → : Select the desired phone number. →  2 times
- 5 To save the message, select "IGEN". → 
- 6 To send the message, press .
 - To cancel sending, press .

SMS (Short Message Service)

Megjegyzés:

- This unit supports SMS messages of up to 612 characters, however, the maximum number of characters you can send or receive may be limited by your SMS service provider/telephone company. Contact your SMS service provider/telephone company for details.
- If your message contains over 160 characters, the message is a long message and “*Hosszú üz.*” is displayed. Your service provider/telephone company may treat long messages differently from other messages. Contact your service provider/telephone company for details.
- If your phone is connected to a PBX, store the PBX line access number (39. oldal).

Editing/sending a saved message

- 1 (middle soft key) → → **OK**
- 2 : “Küldött lista” → **OK**
- 3 To read a saved message, press or to select the message. → **OK**
- 4 **To edit the message:**
 → : “Üzenet szerkesztése” → **OK** → Continue from step 3, „Writing and sending a new message”, 37. oldal.
To send the message:
 → : “Küldés” → **OK** → Press and hold **C** to erase all numbers. → Continue from step 4, „Writing and sending a new message”, 37. oldal.

Erasing saved messages

- 1 (middle soft key) → → **OK**
- 2 : “Küldött lista” → **OK**
- 3 : Select a message. → **OK**
- 4 → : “Törlés” → **OK**
 - To erase all messages, select “Mindent töröl”. → **OK**
- 5 : “IGEN” → **OK** →

Receiving a message

When an SMS message is received:

- “Fogadás SMS-üzenet” is displayed.
- a tone is heard (if the handset ringer is turned on).
- is displayed with the total number of new (unread) SMS messages.

Reading a received message

- 1 (middle soft key) → → **OK**
- 2 : “Fogadott lista” → **OK**
- 3 : Select a message.
 - Messages which have already been read are indicated by a “✓”, even if they were read using another handset.
 - To erase a message, press **X**. → : “IGEN” → **OK**
- 4 Press **OK** to read the message content.

Megjegyzés:

- To call the message sender, press .

Replying to a message

- 1 While reading a received message, press .
- 2 : “Válasz” → **OK**
- 3 Enter a message (45. oldal). → **OK**
- 4 Edit the destination phone number if necessary. → **OK**
- 5 Continue from step 5, „Writing and sending a new message”, 37. oldal.

Editing/forwarding a message

- 1 While reading a received message, press .
- 2 : “Üzenet szerkesztése” → **OK**
- 3 Continue from step 3, „Writing and sending a new message”, 37. oldal.

Erasing received messages

- 1 While reading a received message, press .

SMS (Short Message Service)

- 2 [↵]: "Törlés" → OK
 - To erase all messages, select "Mindent töröl". → OK
- 3 [↵]: "IGEN" → OK → [✕]

Storing the sender's number in the phonebook

- 1 While reading a received message, press [⏏].
- 2 [↵]: "Tel.könyvbe ír" → OK
- 3 To store the name, continue from step 3, „Editing entries”, 19. oldal.

Editing the sender's number before calling back

- 1 While reading a received message, press [⏏].
- 2 [↵]: "Szerkeszt és Hív" → OK
- 3 Edit the number. → [↵]

Other settings

Storing the PBX line access number (for PBX users only)


Store your PBX line access number (4 digits max.) so that SMS messages are sent properly. When sending SMS messages to entries in the phonebook or redial list, the PBX line access number is deleted. The default setting is "KI".

- 1 [⏏] (middle soft key) [3][5][6]
- 2 [↵]: "BE" → OK
- 3 Enter your PBX line access code and a dialling pause, if necessary. → OK → [✕]



Voice Mail Service

Voice mail service

Voice mail is an automatic answering service offered by your service provider/telephone company. After you subscribe to this service, your service provider/telephone company's voice mail system answers calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by your service provider/telephone company, not your telephone.

When you have new messages,  is displayed on the handset if message indication service is available. Please contact your service provider/telephone company for details of this service.

Fontos:

- If  still remains on the display even after you have listened to new messages, turn it off by pressing and holding  for 2 seconds.

*Intercom/Locator***Intercom**

Intercom calls can be made between handsets in the same radio cell.

Megjegyzés:

- If you receive an outside call while talking on the intercom, you hear 2 tones. To answer the call, press [**📞**], then press [**📞**].
- When paging the handset, the paged handset beeps for 1 minute.

Making an intercom call

- 1 [**☐**] (middle soft key) → [**📞**]
- 2 [**📞**]: Select the desired unit. → **OK**
 - To stop paging, press [**📞**].
- 3 When you finish talking, press [**📞**].

Answering an intercom call

- 1 Press [**📞**] to answer the page.
- 2 When you finish talking, press [**📞**].

Turning auto intercom on/off

This feature allows the handset to answer intercom calls automatically when it is called. You do not need to press [**📞**]. When this feature is set to "BE", the monitoring handset for the baby monitor feature (31. oldal) will also answer baby monitor calls automatically. The default setting is "KI".

- 1 [**☐**] (middle soft key) [**#**][**2**][**7**][**3**]
- 2 [**📞**]: Select the desired setting. → **OK** → [**📞**]

Handset locator

You can locate a misplaced handset by paging it.

- 1 **Base unit:** Press [**📞**].
 - All registered handsets beep for 1 minute.
- 2 To stop paging:
Base unit: Press [**📞**].
Handset: Press [**📞**].

Transferring calls, conference calls

Outside calls can be transferred between 2 handsets in the same radio cell.

2 handsets in the same radio cell can have a conference call with an outside party.

- 1 During an outside call, press [**📞**] to put the call on hold.
- 2 [**📞**]: Select the desired unit. → **OK**
- 3 Wait for the paged party to answer.
 - If the paged party does not answer, press [**📞**] to return to the outside call.
- 4 **To complete the transfer:**
 Press [**📞**].
 - The outside call is being routed to the destination unit.

To establish a conference call:

- [**☐**] → [**📞**]: "Konferencia" → **OK**
- To leave the conference, press [**📞**]. The other 2 parties can continue the conversation.
 - To put the outside call on hold: [**☐**] → [**📞**]: "Tartás" → **OK**
- To resume the conference:
 [**☐**] → [**📞**]: "Konferencia" → **OK**

Megjegyzés:

- If you want to return to the outside call after the paged party answers, press [**X**].

Answering a transferred call

Press [**📞**] to answer the page.

Using Bluetooth devices

Using Bluetooth devices

The handset is Bluetooth wireless technology compatible.

By using with other Bluetooth devices such as a mobile phone and headset, the following features are available:

- Copying phonebook entries from your mobile phone to a handset (42. oldal)
- Having a hands-free conversation by registering a Bluetooth headset to a handset (43. oldal)


Fontos:

- Your mobile phone and headset must be Bluetooth wireless technology compatible.

Turning Bluetooth on/off

You can turn Bluetooth on/off:

- Turn on to copy phonebook entries from a mobile phone or use the Bluetooth headset.
- Turn off to save the battery life of your handset after using the Bluetooth feature.

- 1  (middle soft key) **#613**
- 2 **[↕]**: Select the desired setting. → **OK** → **[🔇]**

Copying phonebook entries from a Bluetooth mobile phone (phonebook transfer)

You can copy phonebook entries from your mobile phone to a handset.

Fontos:

- Some mobile phones may not be compatible with this feature.
- If a copied entry has 4 or more phone numbers (6 max.), 3 phone numbers are stored as one entry. The remaining numbers are stored as a separate entry but with the same name in the phonebook.

- If a phonebook entry includes additional data such as a picture, that entry may fail to copy to the handset.

1 Handset:

 (middle soft key) **#613**

2 Handset:

① **To register a mobile phone and copy from it:**

[↕]: “Cellatelefon” → **OK**

② **To copy from a registered mobile phone:**

[↕]: Select the mobile phone. → **OK**

③ **To copy from another mobile phone (not registered):**

[↕]: “Készülék váltás” → **OK** →

[↕]: “Cellatelefon” → **OK**

④ **To copy from another mobile phone without registering:**

[↕]: “Készülék váltás” → **OK** →

[↕]: “Másik készülék” → **OK**

3 Mobile phone:

Follow the instructions of your mobile phone to copy phonebook entries.

- For pattern ①, ③, and ④ in step 2, you need to search for and select the handset. The Bluetooth PIN (default: “0000”) may be required.

4 Handset:

[↕]: Select the category you want to copy to. → **OK**

5 Handset:

When “Telefonkönyv letöltés” is displayed:

Go to step 6.

When “Üzemódválaszt.” menu is displayed:

[↕]: Select “Automata” or “Manuális”. → **OK**

“Automata”: Download all entries from the mobile phone automatically.

“Manuális”: Copy the entries you selected. Some mobile phone may copy all entries automatically.

- “Üzemódválaszt.” menu is displayed only when the mobile phone supports PBAP (Phone Book

Using Bluetooth devices

Access Profile) for Bluetooth connection.

- The entries being copied are displayed on the handset.

6 Handset:

Wait until “**kész**” is displayed.

- You can continue copying other entries if necessary.

7 Handset: [🔌]

Megjegyzés:

- Some copied entries may have characters which do not exist in the character table (45. oldal). These characters can be displayed but cannot be entered when editing an entry.
- The unit does not support some characters. If a copied entry includes those characters, they are replaced with other available characters or “*”.
- If you receive a call while copying phonebook entries, the copying procedure stops. Try again after finishing the call.

Changing the Bluetooth PIN (Personal Identification Number)

The PIN is used to register a mobile phone. The default PIN is “0000”. To prevent unauthorised access to this product, we recommend that you change the PIN and keep it confidential.

Fontos:

- Please make note of your new PIN. The unit does not reveal the PIN to you. If you forget your PIN, contact an authorised service centre.

- 1 [🔌] (middle soft key) [6][1][9]
- 2 Enter the new 4-digit PIN. → **OK**
- 3 Enter the new 4-digit PIN again. → **OK**
- 4 [🔌]

Using a Bluetooth wireless headset (optional)

By registering a Bluetooth headset to a handset, you can have a hands-free conversation wirelessly.

Fontos:

- 1 headset can be registered to the handset. Only one Bluetooth headset can be connected to the handset at a time.
- For best performance, we recommend using a Bluetooth headset within 1 m of the handset. A headset can communicate with the handset within a range of approximately 10 m.

Panasonic Ni-MH battery performance during use of a Bluetooth headset

When the batteries are fully charged, operating time of the handset using a Bluetooth headset varies depending on usage.

- Continuous use of the headset: 5 hours max.
- Not in use: 50 hours max.

Fontos:

- If you do not use a Bluetooth headset, it is better to turn off the Bluetooth setting to save the battery life of your handset (42. oldal).

Registering a headset to a handset

Fontos:

- Make sure that the Bluetooth headset is not connected to any other Bluetooth device.



 


 
1 Your headset:

Set your headset to registration mode.

- Refer to your headset operating instructions.

2 Handset:

Using Bluetooth devices


 
 
 
- 3  (middle soft key)   
Enter your headset PIN.
 - Typically, default PIN is "0000". Refer to your headset operating instructions.
- 4 Press , then wait until a long beep sounds.
 - When registration is complete,  is displayed. You are ready to use the headset.

Connecting/disconnecting a headset

If you cannot connect the headset and handset by using the headset, you can connect by using the handset. To use your headset with another Bluetooth device such as a mobile phone, you may need to disconnect it from the handset.

 
Fontos:

- Make sure that the headset is turned on.

- 1  (middle soft key)   
 - A long beep sounds.


 
 
 



2

Megjegyzés:

- By turning the headset on, it may connect to the handset automatically. In addition, if the headset automatically connects to an outside line, press  on the handset to hang up.

Deregistering a headset

A handset can cancel a registration of a Bluetooth headset.

- 1  (middle soft key)   
- 2 : "IGEN" → 
 - After the headset is deregistered, the handset beeps and "Új készülék hozzáadás" is displayed.
- 3 

Operating a Bluetooth wireless headset

You can operate the call with your headset even if you place the handset on the charger

during a call. If you place the handset on the charger while listening to recorded messages, the unit stops message playback and the display returns to standby mode.

 
Making calls

After dialling the phone number using the handset, you can operate the call with your headset. Refer to your headset operating instructions for further details.

Answering calls

To answer a call, turn on your headset referring to your headset operating instructions. When you finish talking, turn off your headset referring to your headset operating instructions.


Megjegyzés:

- If you cannot hang up the call using your headset, press  on the handset.


 
Switching from your headset to the handset

You can switch from your headset to the handset:

- during a call.
- during an intercom call.

Press  on the handset.

Adjusting your headset receiver volume

Press  or  repeatedly on the handset while using your headset.

Useful Information

Character entry

The dial keys are used to enter characters and numbers. Each dial key has multiple characters assigned to it. The characters that can be entered depend on the character entry mode (45. oldal).

- Press [◀] or [▶] to move the cursor left or right.
- Press dial keys to enter characters and numbers.
- Press **C** to erase the character or number highlighted by the cursor. Press and hold **C** to erase all characters or numbers.
- Press **A→a** to switch between uppercase and lowercase.
- To enter another character located on the same dial key, press [▶] to move the cursor to the next space, then press the appropriate dial key.
- If you do not press any dial key within 5 seconds after entering a character, the character is fixed and the cursor moves to the next space.

Character entry modes

The available character entry modes are Alphabet (ABC), Numeric (0-9), Greek (ABΓ), Extended 1 (AĀĀ), Extended 2 (SŠŠ), and Cyrillic (AБB). For SMS messages, Alphabet (ABC), Numeric (0-9), Greek (ABΓ), and Extended 1 (AĀĀ) modes are available. When in these entry modes except Numeric, you can select which character is entered by pressing a dial key repeatedly.

When the unit displays the character entry screen:

1/A/? → [↕]: Select a character entry mode. → **OK**

Megjegyzés:

- _ in the following tables represents a single space.
- The dial keys with *1, *2, and *3 in the following tables have different character assignment for SMS. See the footnotes with *1, *2, and *3.

Alphabet character table (ABC)

0 _	1 &*1	2 ABC	3 DEF	4 GHI	5 JKL	6 MNO	7 PQRS	8 TUV	9 WXYZ	#
_ 0	& ' () * , - . / 1	A B C 2 a b c 2	D E F 3 d e f 3	G H I 4 g h i 4	J K L 5 j k l 5	M N O 6 m n o 6	P Q R S 7 p q r s 7	T U V 8 t u v 8	W X Y Z 9 w x y z 9	#

Numeric entry table (0-9)

0 _	1 &*1	2 ABC	3 DEF	4 GHI	5 JKL	6 MNO	7 PQRS	8 TUV	9 WXYZ	#
0	1	2	3	4	5	6	7	8	9	#

Useful Information

Greek character table (ΑΒΓ)

0	1	2	3	4	5	6	7	8	9	#
0	& ' () * , - . / 1	A B Γ 2	Δ E Z 3	H Θ I 4	K Λ M 5	N Ξ O 6	Π P Σ 7	T Υ Φ 8	X Ψ Ω 9	#

Extended 1 character table (ΑĂĂ)

0	1	2	3	4	5	6	7	8	9	#
0	& ' () * , - . / 1	A Ă Á Ă Ă Ă Ă Æ B C Ç 2	D Ę Ě É Ê Ě Ě F 3	G Ğ Ħ İ ĩ İ İ İ İ 4	J K L 5	M N Ń O Ő Ó Ô Ö Ø 6	P Q R S Ş ß 7	T U Ů Ú Ů Ů Û V 8	W Ű X Y ŷ Z 9	#
		a á â ă ā ä â æ b c ç 2	d e è é ê ë ë f 3	g ğ ħ ı ĩ ĩ İ İ İ 4	j k l 5	m n ñ o ő ó ô ö ø 6	p q r s ş ß 7	t u ù ú ů ü û v 8	w ű x y ŷ z 9	

- The following are used for both uppercase and lowercase: ø Ű ŷ

Extended 2 character table (ŠŠŠ) (Not available for SMS)

0	1	2	3	4	5	6	7	8	9	#
0	& ' () * , - . / 1	A Ă Á Ă Ă Ă Ă Æ B C Ç 2	D Ę Ě É Ê Ě Ě F 3	G Ğ Ħ İ ĩ İ İ İ İ 4	J K L 5	M N Ń O Ő Ó Ô Ö Ø 6	P Q R S Ş ß 7	T U Ů Ú Ů Ů Û V 8	W Ű X Y ŷ Z 9	#
		a á â ă ā ä â æ b c ç 2	d e è é ê ë ë f 3	g ğ ħ ı ĩ ĩ İ İ İ 4	j k l 5	m n ñ o ő ó ô ö ø 6	p q r s ş ß 7	t u ù ú ů ü û v 8	w ű x y ŷ z 9	

- The following are used for both uppercase and lowercase:

Ą Ć Ĉ Ę Ł Ĺ Ľ Ń Ŕ Š Š Ů ŷ Ž Ž Ž

Cyrillic character table (АБВ) (Not available for SMS)

0	1	2	3	4	5	6	7	8	9	#
0	& ' () * , - . / 1	A Б В Г 2	Д Е Ж З 3	И Й К Л 4	М Н О П 5	Р С Т У 6	Ф Х Ц Ч 7	Ш Щ Ъ Ы 8	Ь Э Ю Я 9	#

*1

1
. @ / : ; * # + - 1 " ' , ! ı ? ı - € £ \$ ¥ () [] { } & % \ ^ ~ < > = □ §

*2

4
G Ğ Ħ İ ĩ İ İ İ İ 4 g ğ ħ ı ĩ ĩ İ İ İ 4

*3

9
W X Y Z 9 w x y z 9

Useful Information**Error messages**

The displays with abbreviation are rephrased with [].

Display message	Cause/solution
Nincs áram [Base no power] or Nincs csatlak. Csatlak. újra a hál. adaptert. [No link. Reconnect AC adaptor.]	<ul style="list-style-type: none"> • The handset has lost communication with the base unit. Move closer to the base unit and try again. • Unplug the base unit's AC adaptor to reset the unit. Reconnect the adaptor and try again. • The handset's registration may have been cancelled. Re-register the handset (33. oldal).
Telefonvonal ellenőrzése [Check phone line]	<ul style="list-style-type: none"> • The supplied telephone line cord has not been connected yet or not connected properly. Check the connections (8. oldal).
sikertelen [Failed]	<ul style="list-style-type: none"> • Phonebook copy failed (19. oldal). Confirm the other handset (the receiver) is in standby mode and try again.
Nincs kész [Incomplete]	<ul style="list-style-type: none"> • The receiver's phonebook memory is full. Erase the unwanted phonebook entries from the other handset (the receiver) and try again.
Érvényt. szám [Invalid number]	<ul style="list-style-type: none"> • You tried to send an SMS message to a phone number saved in the phonebook, caller list, or redial list that is over 20 digits long.
Mem. megtelt [Memory full]	<ul style="list-style-type: none"> • The phonebook memory is full. Erase unwanted entries (19. oldal). • The call barred list memory is full. Erase unwanted entries (29. oldal). • The schedule alarm memory is full. Erase unwanted entries (30. oldal). • The maximum number of base units (4) is already registered to the handset. Cancel unused base unit registrations from the handset (33. oldal).
Használjon újratölthető akkumulátort. [Use rechargeable battery.]	<ul style="list-style-type: none"> • A wrong type of battery such as Alkaline or Manganese was inserted. Use only the rechargeable Ni-MH batteries noted on 3, 5. oldal.
Fizessen elő a hívófél azonosításra. [You must first subscribe to Caller ID.]	<ul style="list-style-type: none"> • You must subscribe to a Caller ID service. Once you receive caller information after subscribing to a Caller ID service, this message will not be displayed.

Useful Information

Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the base unit's AC adaptor and turn off the handset, then reconnect the base unit's AC adaptor and turn on the handset.


 
General use

Problem	Cause/solution
The handset does not turn on even after installing charged batteries.	<ul style="list-style-type: none"> Place the handset on the charger to turn on the handset.
The unit does not work.	<ul style="list-style-type: none"> Make sure the batteries are installed correctly (8. oldal). Fully charge the batteries (8. oldal). Check the connections (8. oldal). Unplug the base unit's AC adaptor to reset the unit and turn off the handset. Reconnect the adaptor, turn on the handset and try again. The handset has not been registered to the base unit. Register the handset (33. oldal).
The handset display is blank or dark.	<ul style="list-style-type: none"> The handset is in screen saver mode (12. oldal). Activate the handset display again by: <ul style="list-style-type: none"> pressing [◀] or [▶] when on a call. pressing [✕⓪] at all other times. "LCD töltésnél" is set to "KI" while on charge. Change the setting (25. oldal). The handset is not turned on. Turn the power on (12. oldal).
I cannot hear a dial tone.	<ul style="list-style-type: none"> Make sure that you are using the supplied telephone line cord. Your old telephone line cord may have a different wiring configuration. The base unit's AC adaptor or telephone line cord is not connected. Check the connections. Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider/telephone company.


Useful Information**Programmable settings**

Problem	Cause/solution
The display is in a language I cannot read.	<ul style="list-style-type: none"> Change the display language (13. oldal).
While programming, the display returns to standby mode.	<ul style="list-style-type: none"> A call matching an entry in the call barred list is being received. Wait and try again later.
I cannot activate the eco mode.	<ul style="list-style-type: none"> You cannot set eco mode when you set the repeater mode "BE". If required, set the repeater mode to "KI" (34. oldal).
I cannot register a handset to a base unit.	<ul style="list-style-type: none"> The maximum number of base units (4) is already registered to the handset. Cancel unused base unit registrations from the handset (33. oldal). The maximum number of handsets (6) is already registered to the base unit. Cancel unused handset registrations from the base unit (33. oldal). You entered the wrong PIN. If you forget your PIN, contact an authorised service centre.

Battery recharge

Problem	Cause/solution
The handset beeps and/or  flashes.	<ul style="list-style-type: none"> Battery charge is low. Fully charge the batteries (8. oldal).
I fully charged the batteries, but <ul style="list-style-type: none">  still flashes or the operating time seems to be shorter. 	<ul style="list-style-type: none"> Clean the battery ends (+, -) and the charge contacts with a dry cloth and charge again. It is time to replace the batteries (8. oldal). After registering your Bluetooth headset to your handset, the battery life of your handset will decrease. If you do not use a Bluetooth headset, it is better to turn off the Bluetooth setting.

Making/answering calls, intercom

Problem	Cause/solution
 is displayed.	<ul style="list-style-type: none"> The handset is too far from the base unit. Move closer. The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit. The handset is not registered to the base unit. Register it (33. oldal). Activating one touch eco mode reduces the range of the base unit in standby mode. If required, turn eco mode off (13. oldal).

Useful Information

Problem	Cause/solution
Noise is heard, sound cuts in and out.	<ul style="list-style-type: none"> You are using the handset or base unit in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference. Move closer to the base unit. If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details. Unplug the base unit's AC adaptor to reset the unit and turn off the handset. Reconnect the adaptor, turn on the handset and try again.
Sound quality seems to be getting worse.	<ul style="list-style-type: none"> You have registered a handset that is not recommended (3. oldal). The clearest sound quality is only possible by registering the recommended handset.
The handset does not ring.	<ul style="list-style-type: none"> The ringer volume is turned off. Adjust ringer volume (15. oldal). Night mode is turned on. Turn it off (27. oldal).
I cannot make a call.	<ul style="list-style-type: none"> The dialling mode may be set incorrectly. Change the setting (13. oldal). The handset is too far from the base unit. Move closer and try again. Another unit is in use. Wait and try again later. You dialled a call restricted number (29. oldal). The key lock feature is turned on. Turn it off (17. oldal).

Caller ID

Problem	Cause/solution
Caller information is not displayed.	<ul style="list-style-type: none"> You must subscribe to a Caller ID service. Contact your service provider/telephone company for details. If your unit is connected to any additional telephone equipment, remove and plug the unit directly into the wall jack. If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details. Other telephone equipment may be interfering with this unit. Disconnect the other equipment and try again.
Caller information is slow to display.	<ul style="list-style-type: none"> Depending on your service provider/telephone company, the unit may display the caller's information at the 2nd ring or later. Move closer to the base unit.

Useful Information

Problem	Cause/solution
Time on the unit has shifted.	<ul style="list-style-type: none"> Incorrect time information from incoming Caller ID changes the time. Set the time adjustment to "Manuális" (off) (23. oldal).

SMS (Short Message Service)

Problem	Cause/solution
The SMS message centre number is logged in the caller list and the message is not received.	<ul style="list-style-type: none"> Someone tried to send you a message while SMS is turned off. Turn it on (37. oldal).
I cannot send or receive SMS messages.	<ul style="list-style-type: none"> You have not subscribed to the appropriate service. Contact your service provider/telephone company. The SMS message centre number(s) are not stored or are incorrect. Store the correct numbers (37. oldal). Message transmission was interrupted. Wait until the message has been sent before using other telephone functions. If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details.
"FD" is displayed.	<ul style="list-style-type: none"> The unit could not connect to the SMS message centre. Confirm that the correct SMS message centre numbers are stored. Confirm that SMS is turned on (37. oldal).
"FE" is displayed.	<ul style="list-style-type: none"> An error occurred while sending the message. Try again.
"E0" is displayed.	<ul style="list-style-type: none"> Your phone number is permanently withheld or you have not subscribed to the appropriate service. Contact your service provider/telephone company.

Using Bluetooth devices

Problem	Cause/solution
I cannot copy phonebook entries from my mobile phone.	<ul style="list-style-type: none"> Confirm that your mobile phone supports Bluetooth wireless technology. Confirm that your mobile phone supports the Object Push Profile (OPP) or Phone Book Access Profile (PBAP) specification. If your mobile phone is already connected to another Bluetooth device such as a Bluetooth headset, turn it off or disconnect it from your mobile phone. Turn your mobile phone off, then turn it on and try again.

Useful Information

Problem	Cause/solution
I cannot have a conversation using the headset.	<ul style="list-style-type: none"> Your Bluetooth headset is not registered. Register it (43. oldal). Turn your headset off, then turn it on and try again.
Noise is heard during a call on the headset.	<ul style="list-style-type: none"> A Bluetooth headset can communicate with the handset within a range of approximately 10 m. The connection may be subject to interference from obstructions such as walls or electronic devices. Move closer to the handset.
I cannot connect my headset to the handset.	<ul style="list-style-type: none"> Confirm that your headset is turned on. If your headset is already connected to another Bluetooth device such as your mobile phone, disconnect the headset from your mobile phone, then perform the connecting procedure from the handset. The headset is not registered to the handset. Register the headset (43. oldal). Confirm that the Bluetooth setting of your handset is turned on (42. oldal).
Your headset automatically connects to an outside line when turning it on.	<ul style="list-style-type: none"> Press [✕ ☎] on the handset to hang up.
Some headset enhanced features are not available.	<ul style="list-style-type: none"> The handset does not support enhanced features such as Last number redial or Call reject.
An error tone is heard when I try to program the Bluetooth feature.	<ul style="list-style-type: none"> The bluetooth feature cannot be accessed immediately after turning on the handset. Wait a few seconds and try again. The headset has not been connected to the handset yet, even though you performed the connecting procedure setting. Wait a few seconds and try again.

Liquid damage

Problem	Cause/solution
Liquid or other form of moisture has entered the handset/base unit.	<ul style="list-style-type: none"> Disconnect the AC adaptor and telephone line cord from the base unit. Remove the batteries from the handset and leave to dry for at least 3 days. After the handset/base unit are completely dry, reconnect the AC adaptor and telephone line cord. Insert the batteries and charge fully before use. If the unit does not work properly, contact an authorised service centre.

Vigyázat:

- To avoid permanent damage, do not use a microwave oven to speed up the drying process.


Useful Information

Wall mounting

Megjegyzés:

- Make sure that the wall and the fixing method are strong enough to support the weight of the unit.

■ Base unit

 
 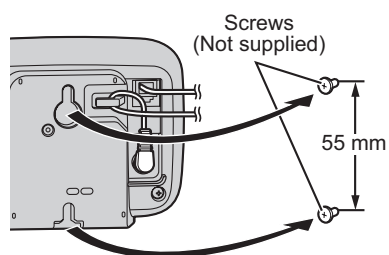




 
Useful Information



Declaration of conformity form



The object of the declaration described above <A> is in conformity with the requirements of the following EU legislations and harmonized standards <C>.



Useful Information

LCD full descriptions

The displays with abbreviation are rephrased with [].

Feature/Setting	Code
Hívólista [Caller list]	#213
Csengő hangereje [Ringer volume]	#160
Csengőhang [Ringtone] (Handset)	#161
Éjszakai mód [Night mode] – Be/Ki [On/Off]	#238
Éjszakai mód [Night mode] – Kezdés/Befejezés [Start/End]	#237
Éjszakai mód [Night mode] – Csengetés késleltetés [Ring Delay]	#239
Nincs cseng. [No ringing]	#2390
Éjszakai mód [Night mode] – Kategória kiválasztása [Select category]	#241
Kategória 1-9 [Category 1-9]	
Fogadott lista [Receive List]	#350
Küldött lista [Send List]	
Új üzenet [Create]	

Feature/Setting	Code
1. Üzenet központ [Message Centre1]	#351
2. Üzenet központ [Message Centre2]	#352
Fővonal száma [PBX Access #]	#356
SMS BE/KI [SMS On/Off]	#357
Belső hívás [Intercom]	#274
Dátum/idő beállítása [Set date/time]	#101
Memo figyelmeztet. [Memo alarm] – MemoFigy.1-5 [Alarm1-5]	#720
Idő beállítás [Time adjustment]	#226
Bluetooth [Bluetooth] – Be/Ki [On/Off]	#613
Bluetooth [Bluetooth] Telefonkönyv másolás [Import phonebook] – Cellatelefon [Mobile phone] – Másik készülék/Készülék váltás [Other device/Change device]	#618
Bluetooth [Bluetooth] Fejbeszélő [Headset] – Új készülék hozzáadás [Add new device]	#621

Useful Information

Feature/Setting	Code	Feature/Setting	Code
Bluetooth [Bluetooth] Fejbeszélő [Headset] – Kapcsolódás/Lekapcsolódás [Connect/Disconnect]	#622	Kijelző mód [Display mode]	#192
Bluetooth [Bluetooth] Fejbeszélő [Headset] – Regisztrálás [Register]	#621	Több elem [Multi items]	#1921
Bluetooth [Bluetooth] Fejbeszélő [Headset] – Kijelentkezés [Cancel register]	#134	Egyetlen elem [Single item]	#1920
Bluetooth [Bluetooth] – PIN kód beállítás [Set PIN]	#619	Billentyűzet háttérvil. [Key backlight]	#276
Bébiőr [Baby monitor] – Be/Ki [On/Off]	#268	LCD töltésnél [LCD in charging] (LCD backlight)	#191
Bébiőr [Baby monitor] – Érzékenység [Sensitivity level]	#269	Kontraszt [Contrast] (Display contrast)	#145
Kézibeszélő neve [Handset name]	#104	Aut. belső hívás [Auto intercom]	#273
Bejövő szám tiltása [Caller barred]	#217	Billentyűhang [Keytones]	#165
Adási teljesítmény [Transmission power]	#725	Hívás korlátozás [Call restrict]	#256
Tapéta [Wallpaper]	#181	Automatikus hívásfogadás [Auto talk]	#200
Háttérszín [Display colour]	#182	Tárcsázási mód [Dial mode]	#120
		Flash [Recall/flash]	#121
		Privát mód [Privacy mode]	#194
		Bázis PIN-kód [Base unit PIN]	#132
		Átjátszó mód [Repeater mode]	#138
		Kézibeszélő regisztrálás [Register handset]	#130
		Kijelentkezés [Cancel register]	#131

Useful Information

Feature/Setting	Code
Ország [Country]	#136
Bázis kiválasztása [Select base]	#137
Bázis törlése [Cancel base]	#139
Kijelző [Display] (Change language)	#110
Naptár [Calendar]	#727

 
 
 
Tárgymutató

Tárgymutató

- | | |
|--|---|
| <p>A Additional base units: 32
Additional handsets: 32
Alarm: 27
Answering calls: 15
Auto intercom: 41
Auto talk: 15</p> <p>B Baby monitor: 30
Base unit
 Cancelling: 33
 Resetting: 29
 Selecting: 33
Battery: 8, 9
Belt clip: 14
Bluetooth wireless technology
 Headset: 43
 Import phonebook: 42</p> <p>C Calendar: 30
Caller ID service: 35
Caller list: 35
Caller list edit: 36
Call restriction: 29
Call share: 17
Call waiting: 16
Call Waiting Caller ID: 16
Category: 18, 35
Chain dial: 19
Character entry: 45
Conference calls: 41
Control type: 10</p> <p>D Date and time: 13
Dialling mode: 13
Direct command code: 22
Display
 Colour: 25
 Contrast: 25
 Display mode: 13
 Language: 13
 LCD backlight: 25
 Wallpaper: 25</p> <p>E Eco mode: 13
Equalizer: 16
Error messages: 47</p> | <p>H Handset
 Deregistration: 33
 Locator: 41
 Name: 28
 Registration: 33
 Hold: 16</p> <p>I Incoming call barring: 28
Intercom: 41</p> <p>K Key lock: 17
Keytones: 25</p> <p>L LCD full descriptions: 55</p> <p>M Making calls: 15
Missed calls: 35
Mute: 16</p> <p>N Night mode: 27</p> <p>P Pause: 15
Phonebook: 18
PIN
 Base unit: 29
 Bluetooth: 43
Power failure: 9
Power on/off: 12
Privacy mode: 25</p> <p>R Recall/flash: 16
Redialling: 15
Region setting: 29
Repeater: 33
Ringer tone: 24, 35</p> <p>S Schedule: 30
SMS feature: 37
Speakerphone: 15
Speed dial: 21</p> <p>T Temporary tone dialling: 16
Time adjustment: 23
Transferring calls: 41
Troubleshooting: 48</p> <p>V Voice mail: 40
Volume
 Receiver: 15
 Ringer (Handset): 15, 24
 Speaker: 15</p> <p>W Wall mounting: 53</p> |
|--|---|



Megjegyzések



Customer Care Helpline Tel.: 801 801 887 (for Poland)

CE0470

■ Poland

Product Panasonic.

This product is under E-guaranty Panasonic.

Please keep purchase bill.

Guaranty conditions

and product information are available manual,

www.panasonic.pl or at info line 801 801 887.

Distribution in Poland:

Panasonic Marketing Europe GmbH Oddział w Polsce

ul. Wołoska 9A, 02-583 Warszawa

Tel: (22) 338 11 00

Fax: (22) 338 12 00

■ Hungary

Sales Department:

Panasonic Marketing Europe GmbH

South-East Europe Fióktelep

1117 Budapest, Neumann J. u. 1.

Web Site: <http://www.panasonic.net/>

Panasonic System Networks Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

© Panasonic System Networks Co., Ltd. 2011



TG8611PD

PNQX3416ZA TC0511YK0

PD-1/2